



 
 
 
B5768-0920

The Barbie[®] as The Princess and the Pauper

Ages 3+


INSTRUCTIONS

Contents:

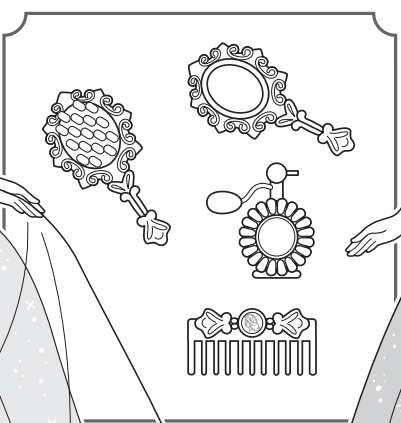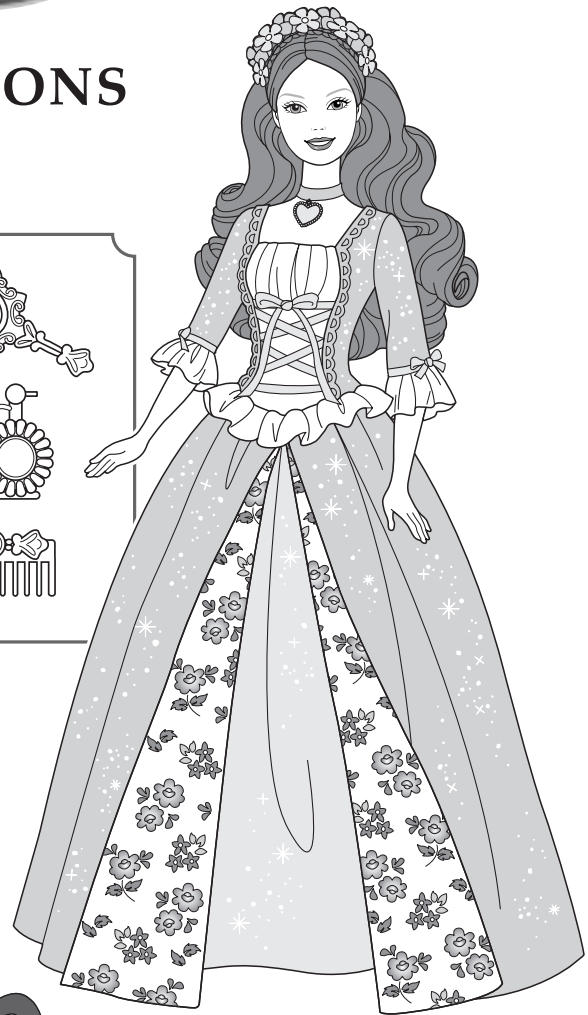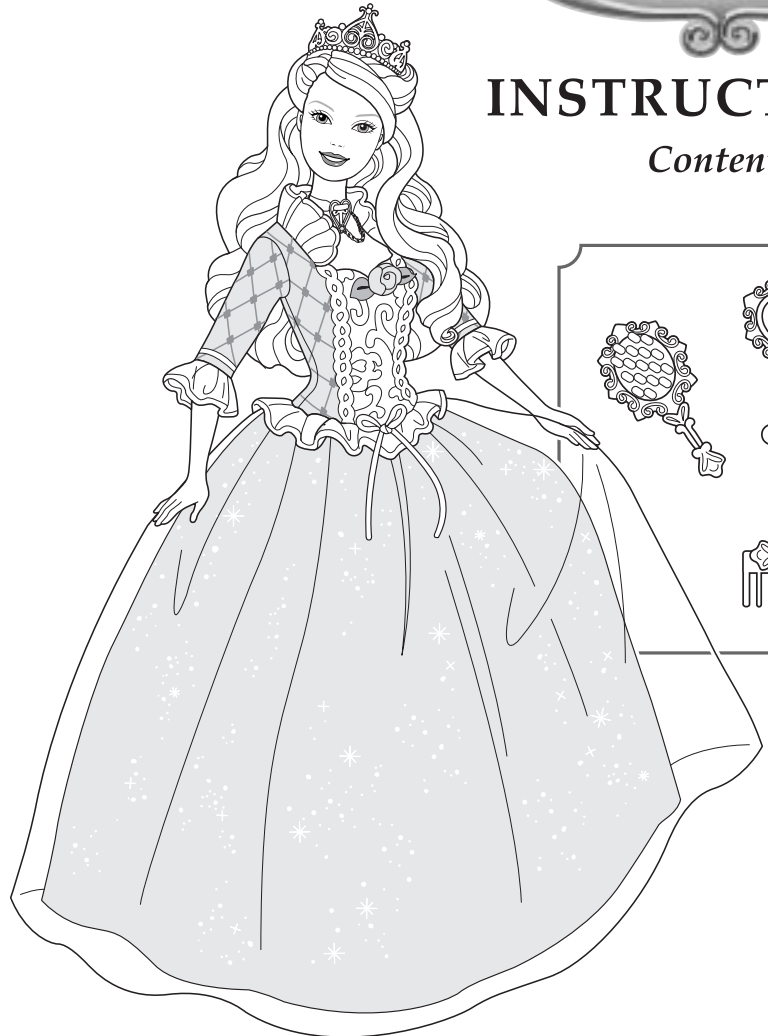

Princess Anneliese™ doll...

 B5768

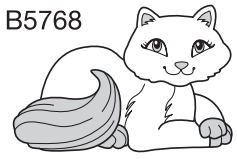

...or, Erika™ doll

B5770



ADULTS NOTE:

- Cut the plastic attachment with safety scissors and discard pieces.
- Please remove everything from the package and compare to the contents shown here.
- Requires 3 AG13 or LR44 button cell batteries (included).
- Dolls sold separately. Subject to availability. Fashions, colors and decorations may vary.
- Keep these instructions for future reference as they contain important information.

WARNING:
CHOKING HAZARD – Toy contains small balls and small parts.
 Not for children under 3 years.

© 2004 Mattel, Inc. El Segundo, CA 90245. U.S.A. All Rights Reserved.

Mattel U.K., Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.

Mattel Australia Pty., Ltd., Richmond, Victoria 3121. Consumer Advisory Service 1300 135 312 (valid only in Australia).

 
Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: 03-78803817, Fax: 03-78803867.


Mattel, Inc., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 424-TOYS.

Remove 'Try Me' Wire

The 'TRY ME' wire is connected to the back of doll during **in-package demonstration only**. Please undo the vinyl strap and pull the doll away from the package. The 'TRY ME' wire will disconnect. If it does not disconnect, remove the wire by hand.

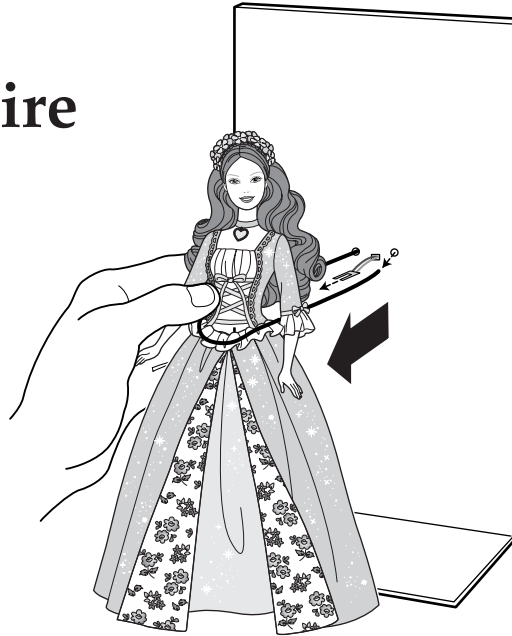


B5770 Erika™ doll shown.

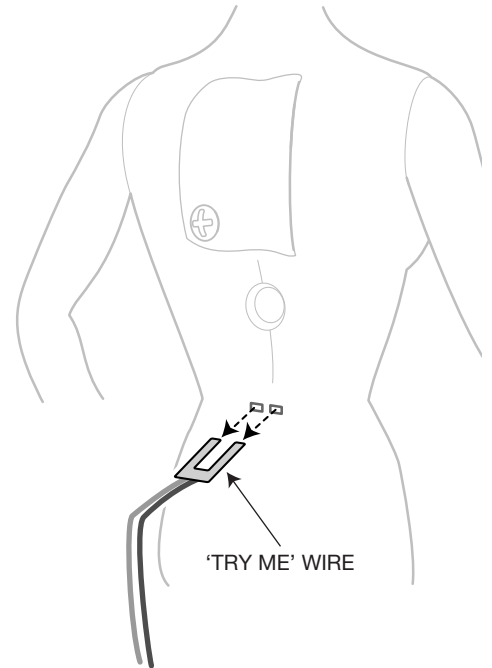 

Replace Batteries

Replace batteries when sounds become distorted. To replace batteries, use a Phillips screwdriver (*not included*) to unscrew battery door. Insert three AG13 or LR44 button cell batteries (*not included*). Replace battery cover.

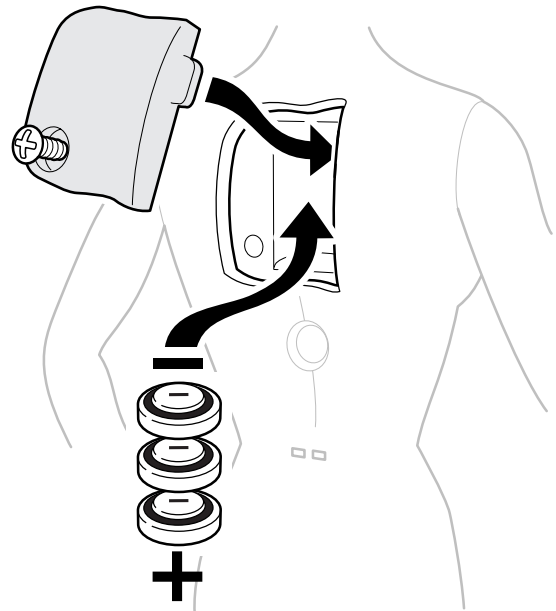


Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy (product). Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy (product) before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Playing With One Doll

Press sound button once, and doll "sings" one of two songs. Wait until her song is completed to press sound button again. She will "sing" you another song!

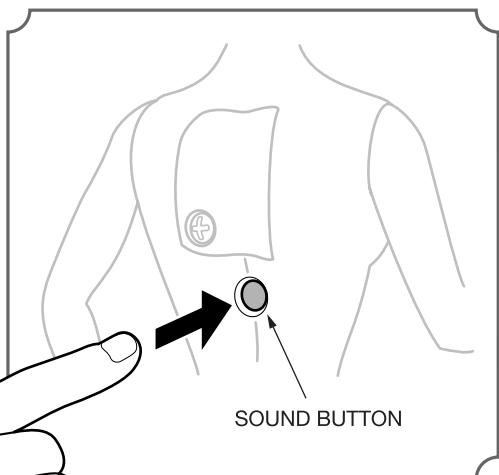

SOUND BUTTON

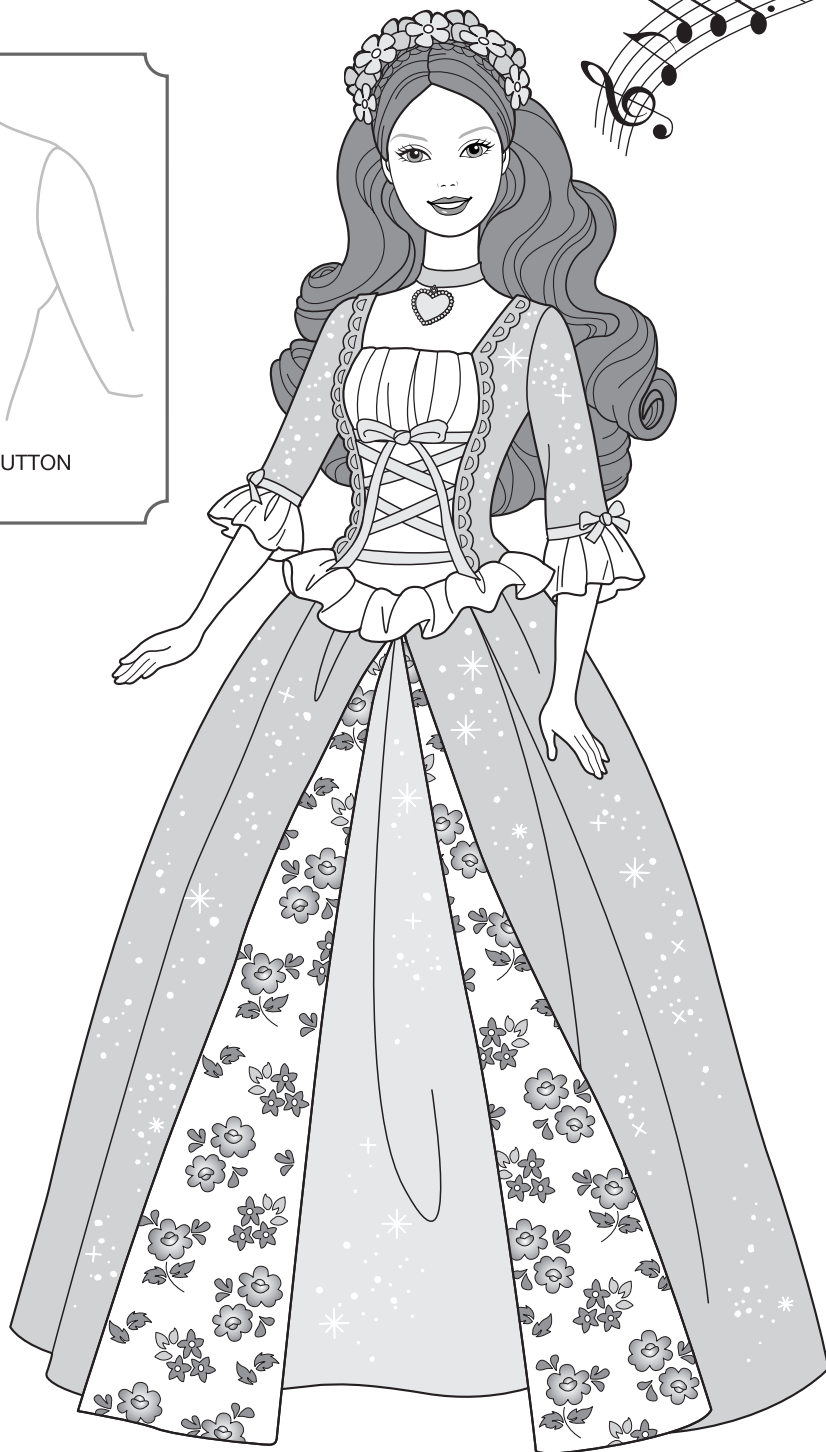



B5770 Erika™ doll shown.

Playing With Two Dolls

Dolls sold separately, subject to availability.

You must have a Princess Anneliese™ doll and an Erika™ doll in order to “sing” their duet.

Press sound button on each doll until the next song for Princess Anneliese™ doll is “I’m just like you!”, and for Erika™ doll it is “You’re just like me!” Now, press each doll’s sound buttons at the same time and hear their beautiful duet!

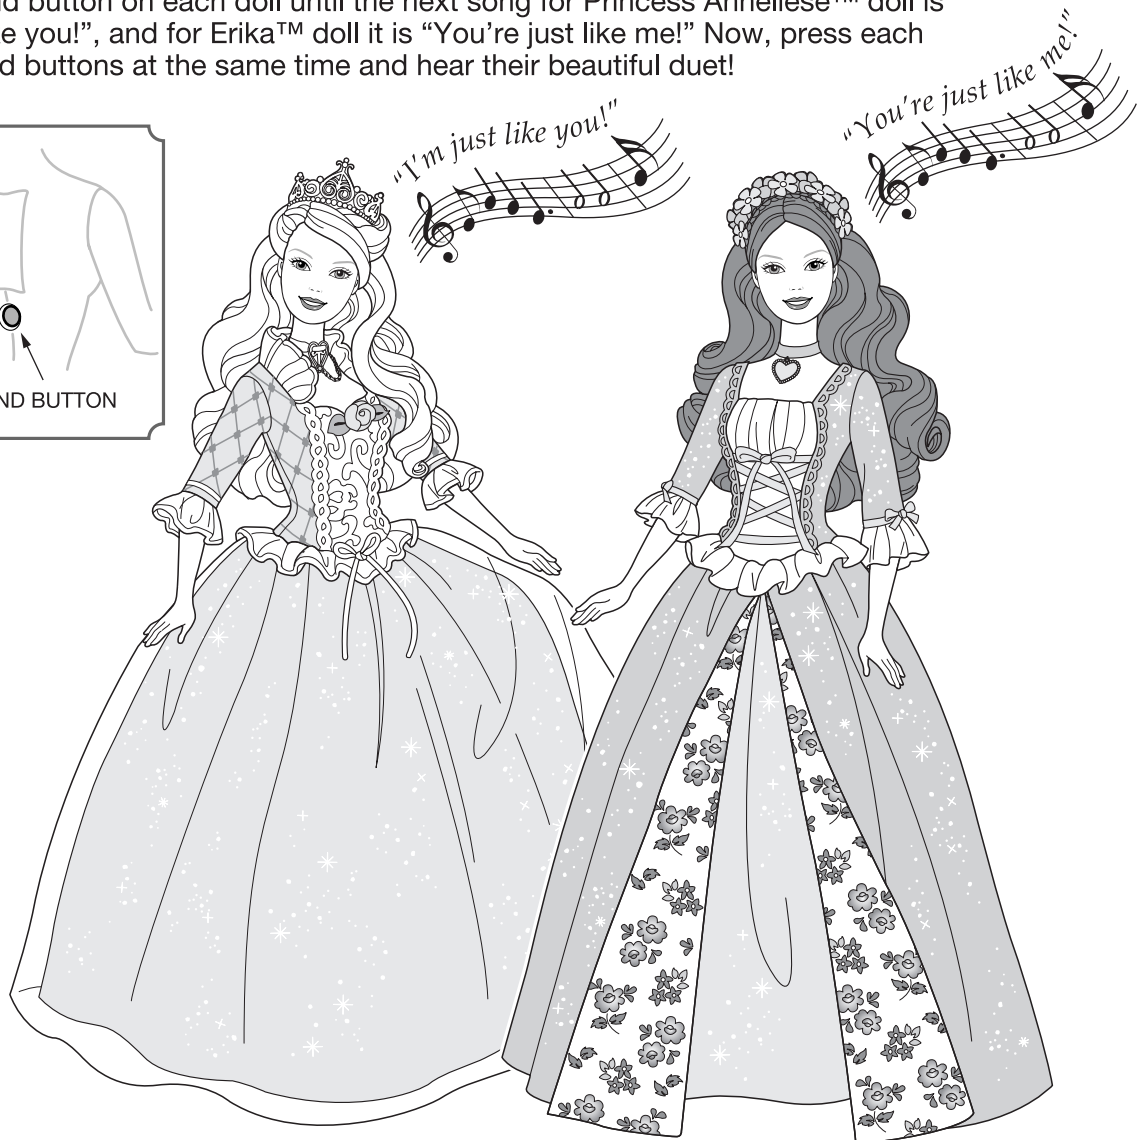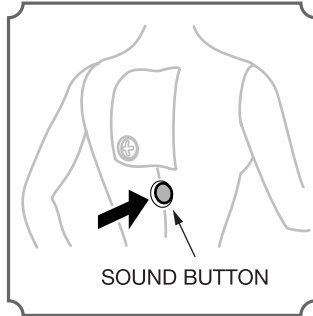

B5768 Princess Anneliese™ doll

B5770 Erika™ doll

CONSUMER INFORMATION

YOU CAN TELL IT'S MATTEL!™ CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

Consumer Relations, Mattel, Inc.
333 Continental Blvd.
El Segundo, CA 90245 USA

1 (800) 524-TOYS

WE ARE DEDICATED TO QUALITY PRODUCTS.



**CONFORMS TO THE SAFETY
REQUIREMENTS OF ASTM F963.**