 


Install 2 AAA batteries in doll's right leg.

Requires 2 AAA Alkaline Batteries (not included). Use only alkaline batteries. Use a Phillips head screwdriver (not included) to remove battery door.

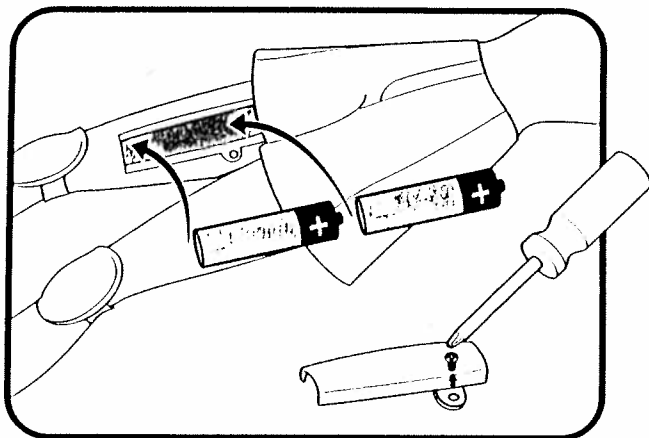

**CAUTION:**

1. Non-rechargeable batteries are not to be recharged.
2. Do not use rechargeable batteries.
3. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
4. Never mix old batteries with new batteries (replace all batteries at the same time).
5. Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
6. Remove batteries from product before extended storage.
7. Always remove old or dead batteries from the product.
8. The supply terminals are not to be short-circuited.
9. Check that the contact surfaces are clean and bright before installing batteries.
10. Dispose of batteries safely.

**TWO YEAR LIMITED WARRANTY**

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Adjustment Center, 15930 E. Valley Boulevard, City of Industry, California 91744 for replacement or refund at our option. This warranty does not cover damage resulting from accident, misuse or abuse. **VALID ONLY IN U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**CONSUMER INFORMATION**

MATTEL TOYS



YOU CAN TELL IT'S MATTEL! CALL us toll free or write with any comments or questions about our products or service. Monday-Friday, 8:00 a.m. - 5:00 p.m. PST, 11:00 a.m. - 8:00 p.m. EST. Outside U.S.A., see telephone directory for Mattel listing.

Consumer Affairs, Mattel, Inc.  
333 Continental Blvd.  
El Segundo, CA 90245 USA.

**1(800) 524-TOYS**

**WE ARE DEDICATED TO QUALITY PRODUCTS.**



CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

Send only the product to the address above. Send all correspondence to Consumer Affairs, Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245-5012, U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday-Friday, 8:00 a.m. - 5:00 p.m. EST.

**WARNING:**

**CHOKING HAZARD** - Small parts.  
Not for children under 3 years.

# Cool Skating Barbie® Doll



25887-0920-G1B

## INSTRUCTIONS

### CONTENTS



Please remove everything from the package and compare to the contents shown here.

If any items are missing, please call 1-800-524-TOYS.

Keep these instructions for future reference as they contain important information.

 
 
Skates are not removable. Doll not for use with some Barbie® fashions and accessories.

Colors and decorations may vary from those shown.

**Install 2 AAA batteries in doll's right leg. SEE INSTRUCTIONS BACK.**

**To Make Your Doll Skate Best:**

1. Hold doll above a smooth surface.
  2. Push on/off button behind doll's right boot while holding doll's leg.
  3. Place doll on a smooth surface and then guide her briefly, then release.
- Pushing button again will make doll stop.

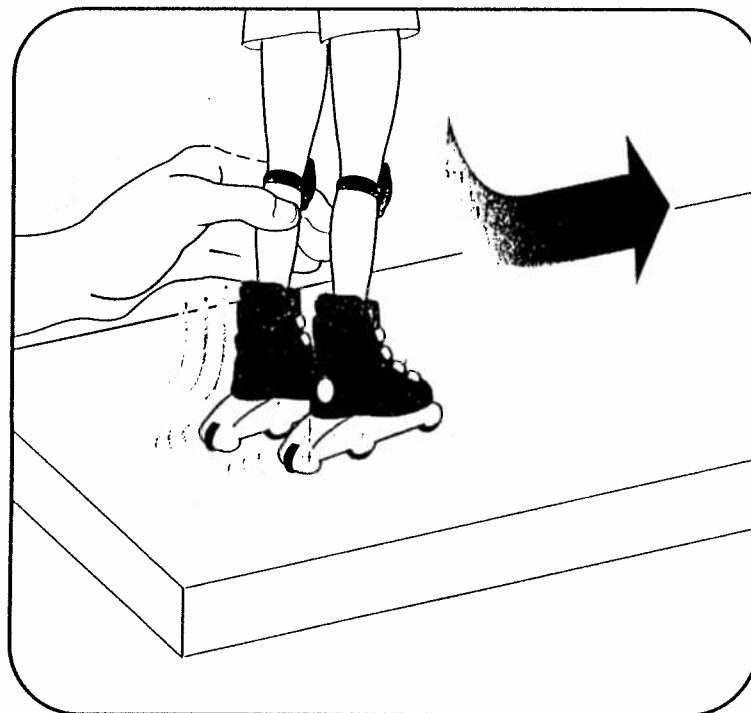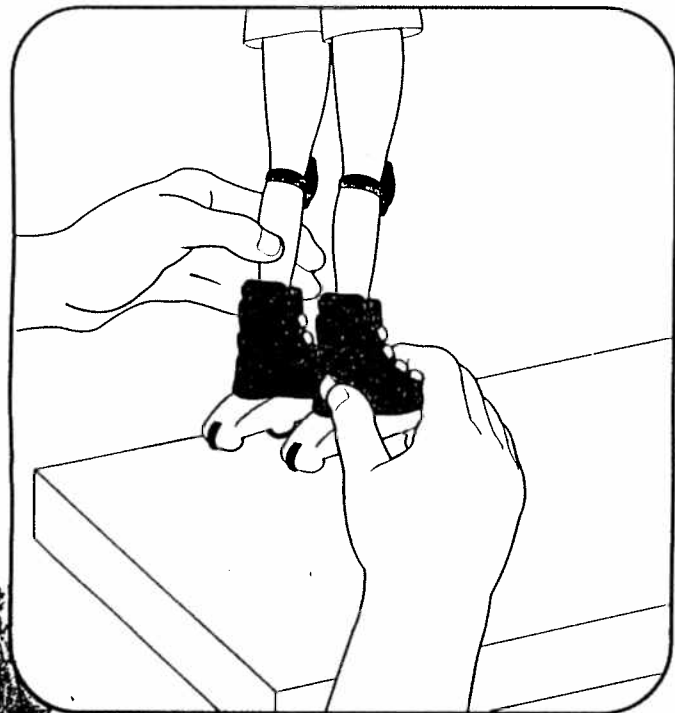

**As doll skates forward, her head and right arm moves!**

Doll skates best on smooth surfaces.

Doll automatically turns off after 30 seconds. Pushing button will turn skating mechanism on again. This button also turns doll off.

Batteries should be changed when doll moves slowly.

**ATTENTION:** To prevent getting wheels jammed, keep hair away from wheel of skating boots.

**Kids: Always wear your safety equipment when you go skating!**

