Barbie IN THE CONCRETE INSTRUCTIONS



Product, colors and decorations may vary from those shown.



50799-0920

Please remove everything from the package and compare to the contents shown here.

If any items are missing, please call 1-800-524-TOYS.



 
Keep these instructions for future reference as they contain important information.


Your doll can "dance" using Barbie® doll's dance stand.

Dance stand sold with Sugarplum Princess Barbie® doll. **7.** Slide the doll back into the doll stand, as shown. **2.** Then slide the doll down. **3.** Place the doll stand into the slots on the dance stand.



One doll or two dolls can be arranged on Barbie® doll's dance stand.



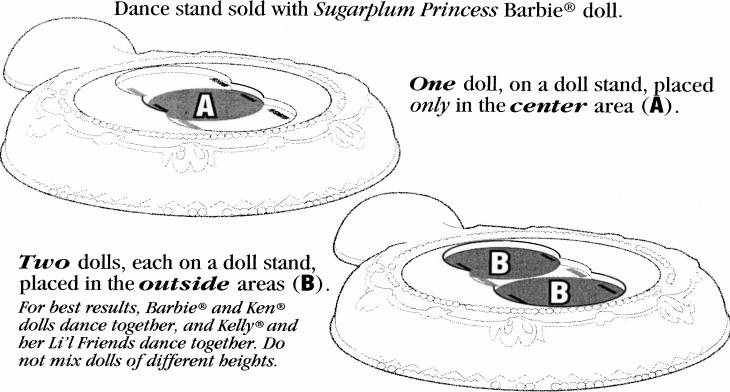

TWO YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid. to Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification. accident, misuse or abuse. In no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). VALID ONLY IN U.S.A. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

Send only the product to the address above. Send all correspondence to Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, California 90245-5012 U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday - Friday, 8:00 a.m. - 6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.



⚠ WARNING: CHOKING HAZARD — Small parts. Not for children under 3 years.