
Barbie VOLKSWAGEN MICROBUS

INSTRUCTIONS CONTENTS

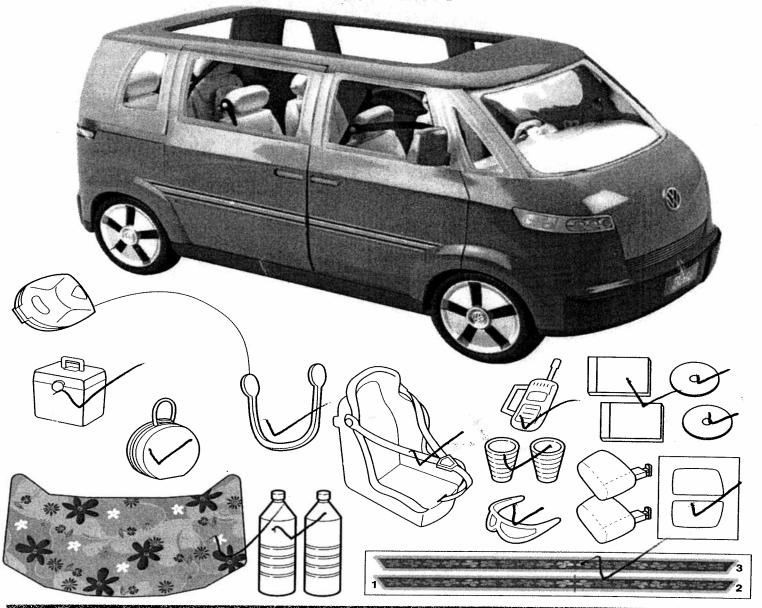

Requires 2 AA batteries, not included. Colors and decorations may vary from those shown.

Please remove everything from the package and compare to the contents shown here. If any items are missing, please call 1-800-524-TOYS.




54251-0920-G2

Keep these instructions for future reference as they contain important information.

©2002 Mattel, Inc. El Segundo, CA 90245 U.S.A. All Rights Reserved.


Trademarks, design patents and copyrights are used with the approval of the owner VOLKSWAGEN AG.

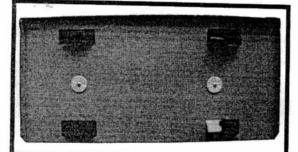


Remove the toy and insert from the package. Using a Phillips screwdriver (not included), undo the screws and washers securing the toy to the insert.



The child seat snaps into any seat with the slots, as shown. The seat belt attaches at the bottom.

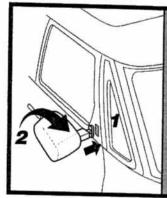

Apply the Mylar labels to the side mirrors. Install two side mirrors on the car.

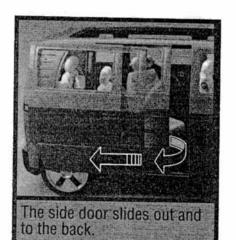













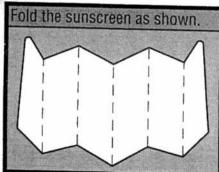

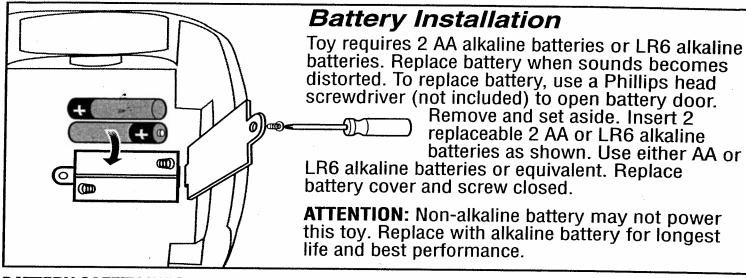

BATTERY SAFETY INFORMATION:

- 1. Non-rechargeable batteries are not to be recharged.
- 2. Rechargeable batteries are to be removed from the toy before being charged.
- 3. Rechargeable batteries are only to be charged under adult supervision.
- 4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- 5. Do not mix old and new batteries
- 6. Only batteries of the same or equivalent type as recommended are to be used.

- 7. Batteries are to be inserted with the correct polarity.
- 8. Exhausted batteries are to be removed from the toy.
- 9. The supply terminals are not to be short-circuited.
- 10. Dispose of batteries safely.
- 11. Do not dispose of in fire as batteries may explode or leak.

TWO YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. In no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). **VALID ONLY IN U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

Send only the product to the address above. Send all correspondence to Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, California 90245-5012 U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday – Friday, 8:00 a.m. – 6:00 p.m. EST. Outside U.S.A., see telephone directory for Mattel listing.





CHOKING HAZARD — Small parts. Not for children under 3 years.