 


Here's What You Get *

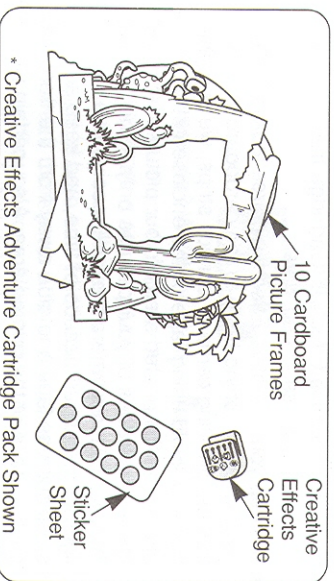

 
* Creative Effects Adventure Cartridge Pack Shown

- Depending on the Creative Effects™ Cartridge you purchased, each Creative Effects Cartridge comes with one sticker sheet and either 10 greeting cards, 10 cardboard picture frames or 10 comic strips.
- If you'd like to purchase additional Creative Effects Cartridges, they are available where you purchased this Creative Effects Cartridge, your Creative Effects Instant Camera and at many other toy and department stores, or call **1-800-432-KIDS**.

Fisher-Price®

**Creative
Effects™**


**Cartridge
Instructions**

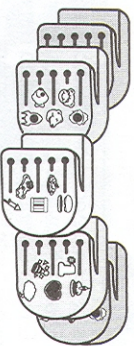

Please save these instructions for
future reference.

No tools necessary for use.

 
Select A Special Effect

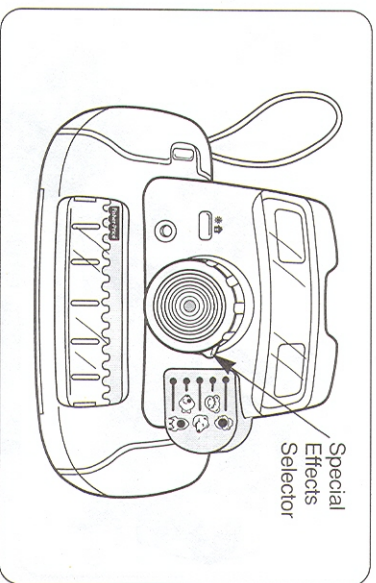

- Now you're ready to take pictures with your new special effects!
- Turn the special effects selector so that it points to one of the special effects pictures.
- Follow the instructions included with your Creative Effects™ Instant Camera to take pictures.
- Use the accessories included with your Creative Effects Cartridge to add pizzazz to your pictures!

4

 Attaching the Cartridge

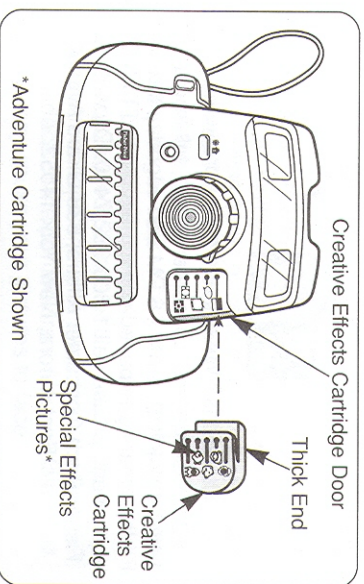


- Locate the Creative Effects Cartridge™ door on your Creative Effects Instant Camera.
- Position the cartridge so that the special effects pictures are towards the front of the camera. Insert the thick end of the cartridge into the Creative Effects Cartridge door.

Please Note: Do not insert anything other than a Fisher-Price® Creative Effects Cartridge into the Creative Effects Cartridge door.

3

 Removing the Cartridge

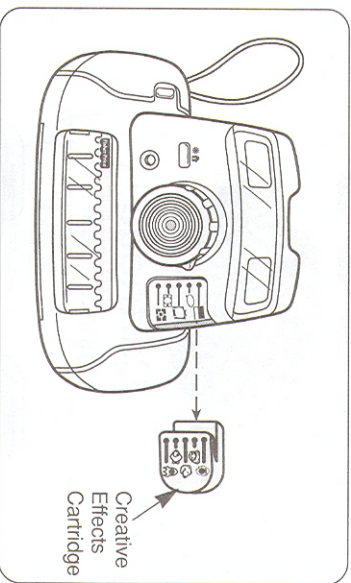

- To use the original special effects included with your Creative Effects™ Instant Camera, simply grasp the Creative Effects Cartridge and pull to remove it from the Creative Effects™ Instant Camera.

Care

- Keep the Creative Effects™ Cartridge free from dirt and away from sand and water.
- To keep your Creative Effects pictures looking their best when attaching them to the cardboard picture frames, greeting cards or comics strips, we suggest that you avoid using tape or the enclosed stickers directly on the printed area of your picture. Tape and sticker the edges of your pictures only. Avoid displaying your pictures where they will receive direct sunlight for prolonged periods of time, and keep adhesives such as tape and glue away from the front and back surface of the printed area. Also, certain types of vinyl may cause your pictures to fade.

Questions?



Questions? We'd like to hear from you!

 
Call Fisher-Price Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

In Canada, please call 1-800-567-7724, or write to: Mattel/Fisher-Price, 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2. Please include your name, address and daytime telephone number.

In Great Britain, telephone 01734 770488.

In Australia, call the Fisher-Price Australian Consumer Advisory Service toll-free at 1-800-800-812, or write to: Fisher-Price, Mattel Pty. Limited, 461 Street, Port Melbourne, Victoria 3207.

Look What You Can Do!

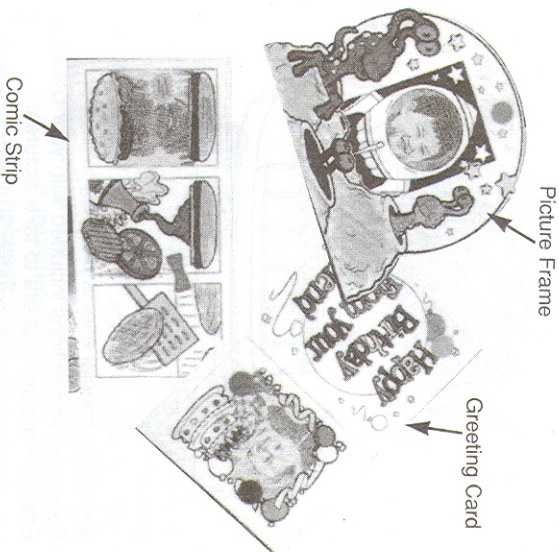

Picture Frame

Greeting Card

Comic Strip