


Battery Replacement

Toy requires 3 replaceable AAA or LR03 alkaline batteries. Replace batteries when sound becomes distorted. To replace batteries, use a Phillips head screwdriver (not included) to open battery door. Insert 3 replaceable AAA or LR03 alkaline batteries as shown. Use either AAA or LR03 alkaline batteries or equivalent. Replace battery cover and screw closed.

ATTENTION: Non-alkaline batteries may not power this toy. Replace with alkaline batteries for longest life and best performance.

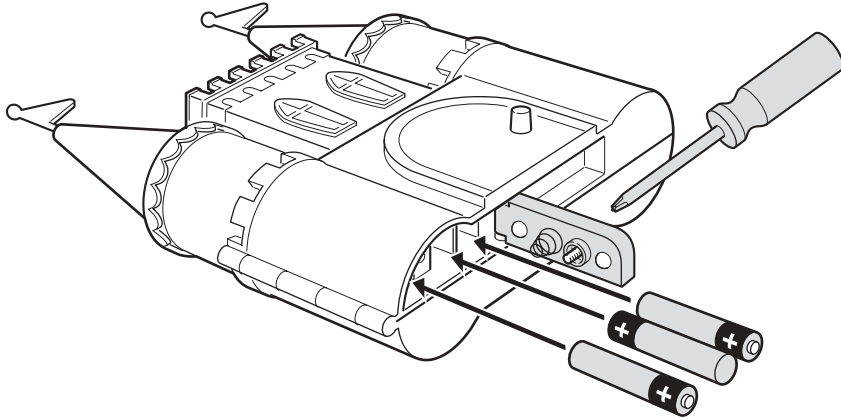

BATTERY SAFETY INFORMATION:

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the toy before being charged.
3. Rechargeable batteries are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old and new batteries
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Batteries are to be inserted with the correct polarity.
8. Exhausted batteries are to be removed from the toy.
9. The supply terminals are not to be short-circuited.
10. Dispose of batteries safely.
11. Do not dispose of in fire as batteries may explode or leak.

CONSUMER INFORMATION

MATTY MATTEL™ boys



YOU CAN TELL IT'S MATTEL!™ CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

Consumer Relations, Mattel, Inc.
333 Continental Blvd.
El Segundo, CA 90245 USA

1(800) 524-TOYS

WE ARE DEDICATED TO QUALITY PRODUCTS.


WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

Barbie® Doll
& Krissy® Doll
Doll

Princess Palace™

INSTRUCTIONS

CONTENTS

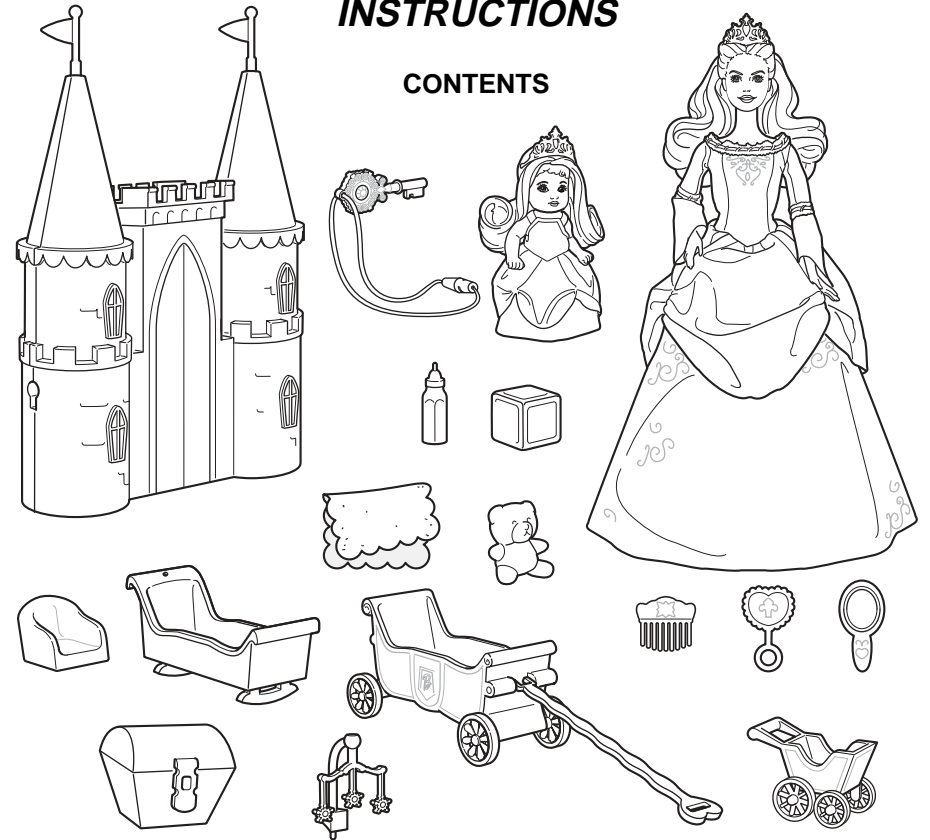

Requires 3 AAA alkaline batteries. For longer life use only alkaline batteries.
Colors and decorations may vary from those shown.

Please remove everything from the package and compare to the contents shown here.
If any items are missing, please call 1-800-524-TOYS.




B4769-0920

Keep these instructions for future reference as they contain important information.


© ©2003 Mattel, Inc. El Segundo, CA 90245 U.S.A. All Rights Reserved.

Castle opens into a musical palace!


1 Use the key to open up the castle. Music plays.

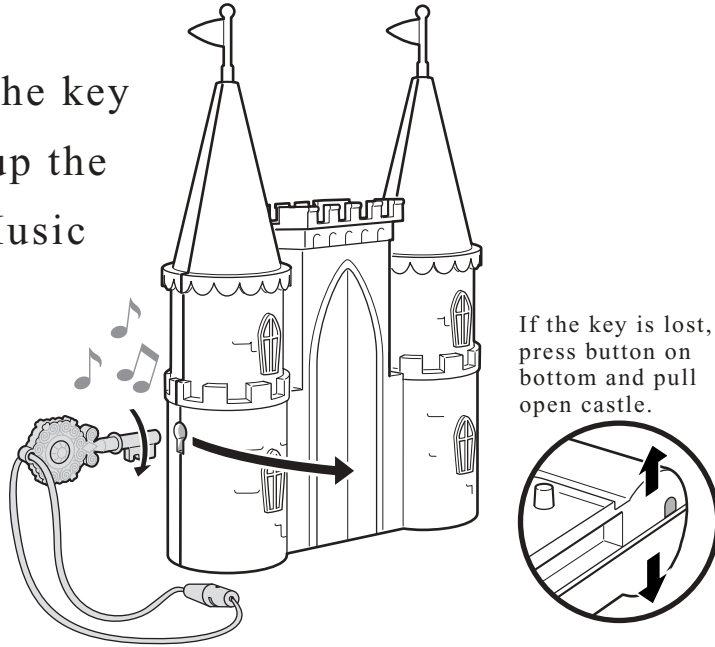

2 Place the cradle onto the shield.

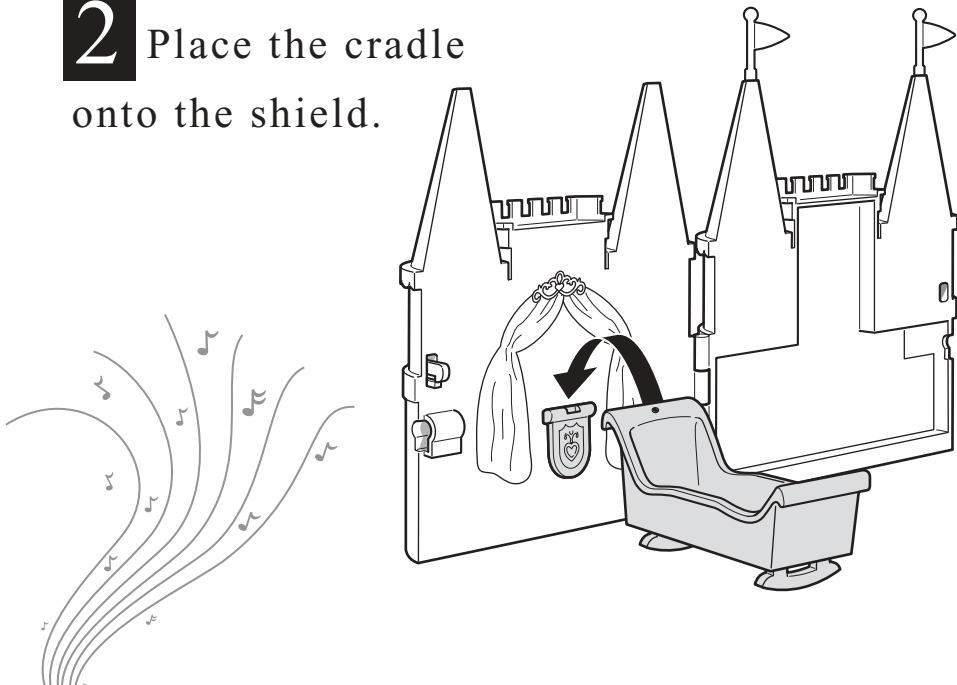

3 Turn the knob on the "outside" of the castle to start the rocking action.

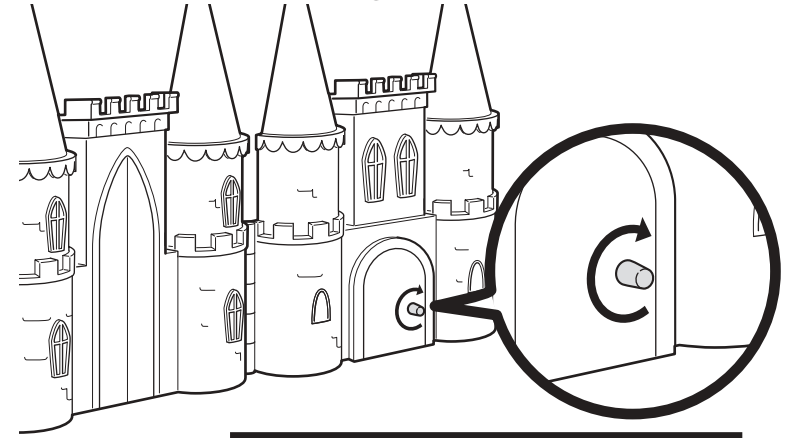

4 The cradle rocks and music plays.



Assembly of the carriage and cradle mobile.

