



INSTRUCTIONS

8+
MATTTEL
DLV45

INDOOR USE ONLY.



Adult assembly required to attach replacement propellers.



CE 0890 2,4 GHz

Mattel Europa B.V. (located at Gondel 1, 1186MJ Amstelveen, The Netherlands) hereby declares that this toy is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity may be obtained from Mattel Europa B.V. at the above address.

Includes one 3.7V Rechargeable LiPo Battery Pack for Hover board.
Requires 3 AAA alkaline batteries (not included) for the Controller.
Dispose of batteries safely. Call or go to website for replacement propeller installation instructions.

Safety Information and Notes

- ⚠ CAUTION: To prevent entanglement, keep hair away from propellers.
 - ⚠ CAUTION: Do not attempt to grab the rotating propeller.
 - ⚠ CAUTION: If propeller(s) are damaged, do not fly Hover Board. Flying with damaged propellers may lead to injury.
- IMPORTANT:** Please read all instructions before operating your Hover Board.
Only use the product under the supervision of an adult. Take care to ensure during use that there is a sufficiently large space between people, animals and objects.
Do not put objects into the propeller.
This product is not recommended for use on loose dirt or wet surfaces. Do not immerse in water.
IMPORTANT: DO NOT touch Hover Board with metallic objects. The product might short circuit causing damage.
Stay at least 3 to 6 feet away from the Hover Board. That goes for anyone watching as well.
Always keep an eye on the Hover Board. If it looks like it's going to crash into you, your friends or anything else, release the throttle joystick and step out of the way.
Never disassemble or attempt to modify the product.

LiPo Battery Information

 
- DO NOT RECHARGE THE HOVER BOARD IF IT FEELS HOT. ALLOW IT TO COOL BEFORE RECHARGING.
- DO NOT ATTEMPT TO USE OR CHARGE THE HOVER BOARD IF IT SHOWS SIGNS OF LEAKAGE OR CORROSION.
- DO NOT DISASSEMBLE THE HOVER BOARD PERMANENTLY INSTALLED LIPO (LITHIUM POLYMER) BATTERY. THE LIPO BATTERY IS A SEALED LIPO BATTERY.
- IF THE HOVER BOARD AND/OR CONTROLLER ARE WET, THOROUGHLY DRY BEFORE USING OR CHARGING.
- REGULARLY EXAMINE ALL CONNECTORS. IN THE EVENT OF DAMAGE, DO NOT USE.
- REPLACE BATTERIES IN CONTROLLER IF HOVER BOARD CANNOT PERFORM PROPERLY AFTER THE HOVER BOARD FULLY CHARGED.
- When exposed to an electrostatic source or the Hover Board malfunctions, turn the power OFF and ON again. This should reset your Hover Board and let it resume normal operation.
- To avoid accidental operation, always turn switches OFF and remove all batteries for storage.
- ADULT NOTE:** To remove LiPo battery for disposal: turn off unit, cut out battery from the foam casing, use scissors to cut wire, wrap wire end with tape to isolate it, repeat with remaining wires. Dispose of LiPo battery in accordance with your local laws.

Contents: Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel office. Keep these instructions for future reference as they contain important information.

SET UP

1 CHARGING WITH THE USB CABLE

Must charge hover board before first use. Charge time is approximately 120 minutes or more. Connect the Controller to a powered USB port with the supplied USB cable. Attach power cable located inside Controller to Hover Board. Hold the charging plug and gently pull it out of the socket.

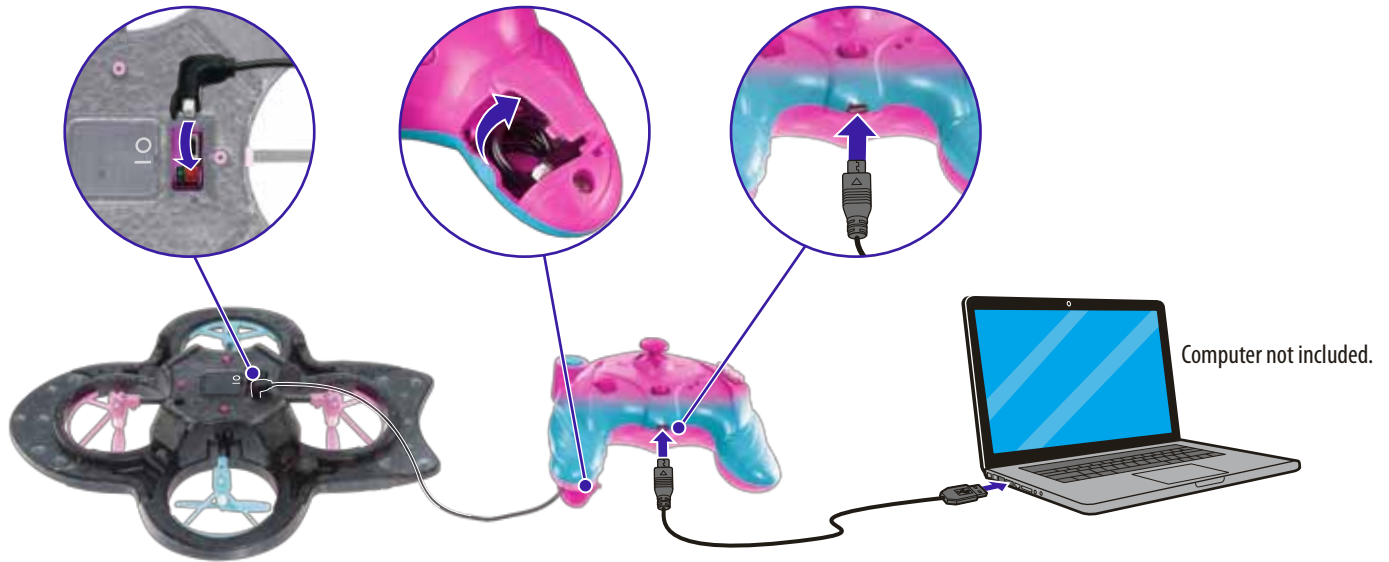

Note: NEVER pull on the cable as this may cause the cable to break.

2 Hover Board is powered by a LiPo battery that is permanently installed. Set Hover Board to "OFF" position and Controller in "Charging" position before charging.



Note: When Hover Board is charging, Red LED of Controller will be "ON".



Check cable connection



 
Charging (90-120 minutes)



Fully charged

3 Controller Battery Installation

Unscrew the battery cover with a Phillips head screwdriver (not included). Insert new 3 AAA (LR03) alkaline batteries (not included) with polarity (+/-) as shown inside the battery compartment. Replace battery cover and tighten screw. Use either "AAA" alkaline batteries or equivalent. For longer life, use only alkaline batteries. When exposed to an electrostatic source, the product may malfunction. If this problem occurs, reset the product by reinstalling the batteries. Replace batteries in Controller if the Hover Board runs slowly after a recharge or if you see a green light flashing on the Controller.

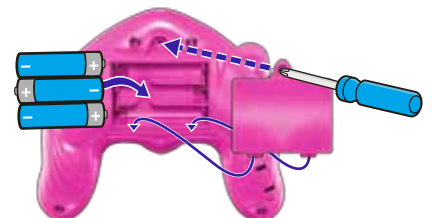

PLAY

1 Switch ON and pair Hover Board to Controller. Remember to disconnect the USB cable from the Controller before play.

1A Switch ON the Hover Board, green LED will flash slowly.

1B Switch ON the Controller, green LED on Controller will flash slowly.



If green LED on Hover Board & Controller keep flashing, and no "Beep" sounds, that means pairing failure. Please switch OFF Hover Board and Controller, repeat step #1.

2 About the Controller.

Launch/Land

Press to **launch**.
Press again to **land**.

F/B/L/R

Push joystick as needed.
Release joystick to **stop**.

360° Spin

Keep pressing to make Hover Board spin in clock-wise direction. **Release** button to **stop**.

Height control switch

Adjust up/down

3 Press launching / landing button (in blue) once to launch. Allow Hover Board to stabilize and hover for a few seconds.

3A Place the Hover Board on the floor with doll facing away from you.
NOTE: Doll flies in the direction she is facing.



3B



Hint: If Hover Board doesn't function properly, turn "OFF" Hover Board and Controller, repeat the PLAY steps. If malfunction continues, check if battery is low.

Troubleshooting

 
4 Trim Buttons

Press to stabilize Hover Board's balance.



Trimming Section

Note: When Hover Board veers to one side in hovering stage, press the trim button of the opposite side to stabilize Hover Board's direction as needed.

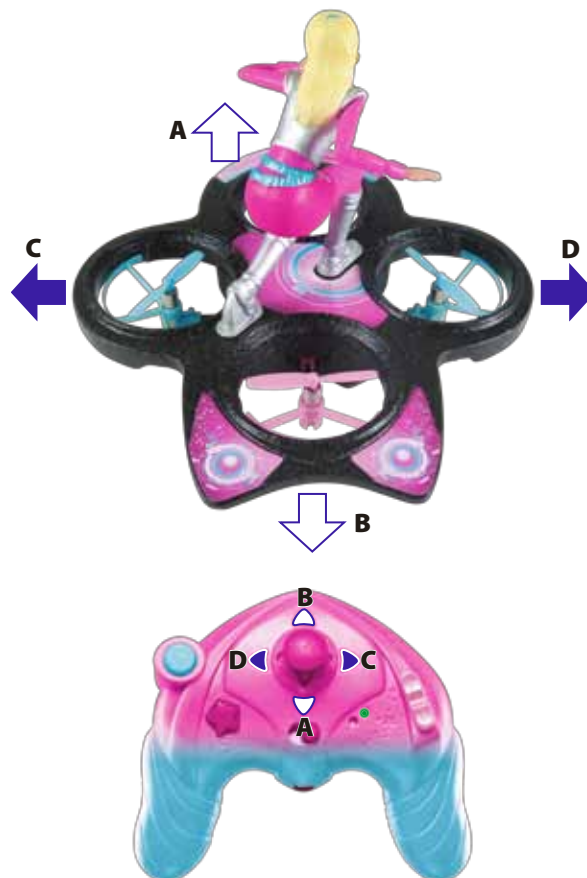


Hints for charging

Red & green LED flashing quickly- Low battery.



 Note: Recharge Hover Board when battery is low, it may take 90 to 120 minutes.

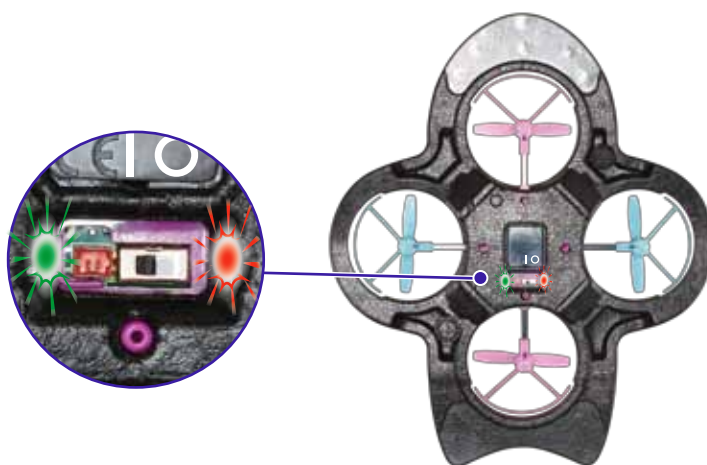

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1-800-524-8697 (US and Canada only).

SERVICE.MATTEL.COM

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan

Kerinci, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.