



INSTRUCTIONS

3+
MATTEL
 DMC32

Contents



Water toys sometimes get messy. Protect play surfaces before use. Do not use on surfaces that can be damaged by water. Drain, rinse, clean and dry all items thoroughly before storing.

Doll cannot stand alone.

Colors and decorations may vary.

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1-800-524-8697 (US and Canada only).

SERVICE.MATTEL.COM

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service -

1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.

WARNING:
 CHOKING HAZARD - Small parts.
 Not for children under 3 years.


Contents: Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel office. Keep these instructions for future reference as they contain important information.



1
Fill pool with water to line as shown.




2
Wind up dog's tail clockwise until you hear a click.

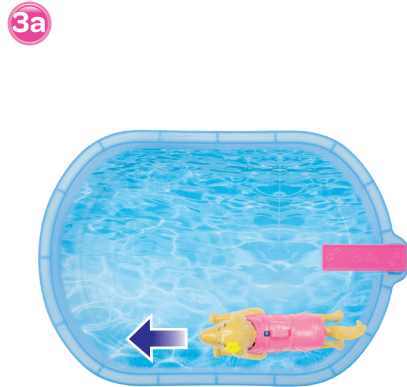

3a



4a
Attach puppy to the back of dog and they swim together!

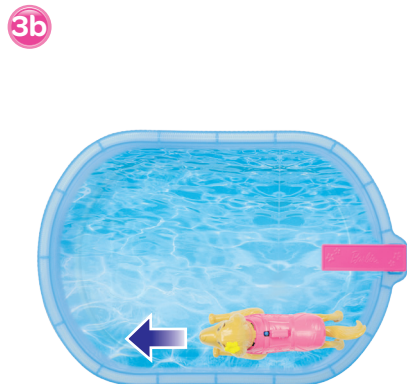

3b



4b
Press for swimming!



Color-change



Purple



Warm water activates color change on swimsuit.



Pink

Swimsuit changes back to purple at room temperature.