



STYLE

- 1 Twist comb to remove.

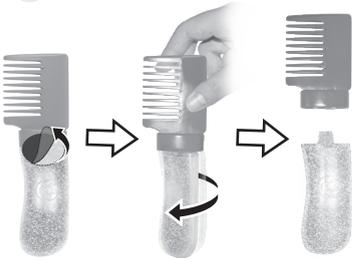

- 2

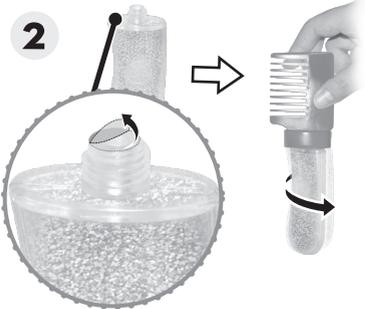


Remove seal from glitter tube and reattach comb to glitter tube.

- 3 Squeeze the tube to activate glitter, brush through hair.



WASH

- 4

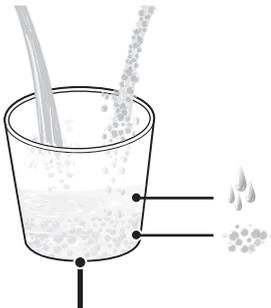

Cup not included.

For soap bubbles: Mix 1 part children's shampoo (not included) to 2 parts water and stir.



- 5




Note: 1. Do not add dirty water or glitter into the drawer as it may cause pump malfunction. 2. Overfilling of drawer may cause leakage.

WASH

- 6** Press the button a few times to wash doll's hair.



- 7** Clean doll's hair with clean, non-soapy water.

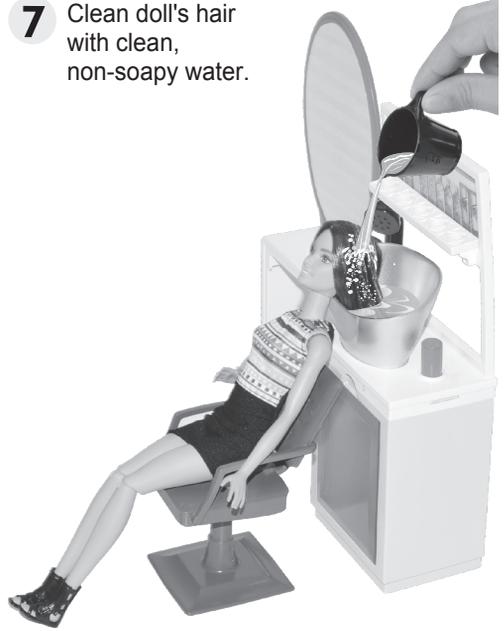


Note: If nothing comes out of the spout, fill drawer with warm water (not above 110°F/43°C) and pump to unblock.

CLEAN UP

- 8** Once play has been completed, empty the water of sink and salon table drawer.



- 9** Remove comb from tube. Rinse under warm water (not above 110°F/43°C).

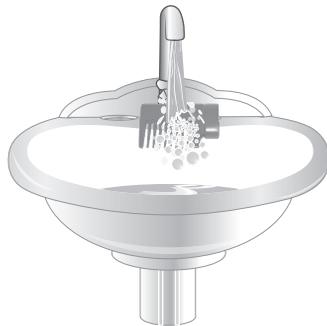

Note: Drain, rinse, clean and dry all items thoroughly before storing.

The glitter tube in this product has been sealed with a tamper-evident seal. If this seal is broken, do not use this product and call 1-800-524-8697 for a replacement.

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1-800-524-8697
(US and Canada only).

SERVICE.MATTEL.COM

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.