 
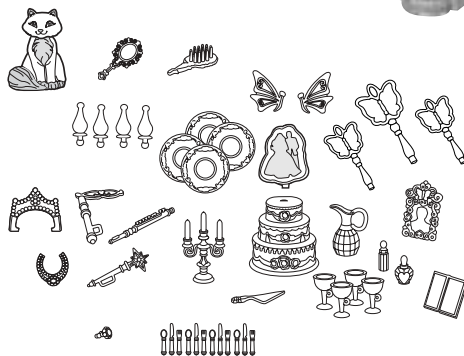 


Barbie®

The Barbie® Princess and the Pauper

Musical Kingdom™ Giftset

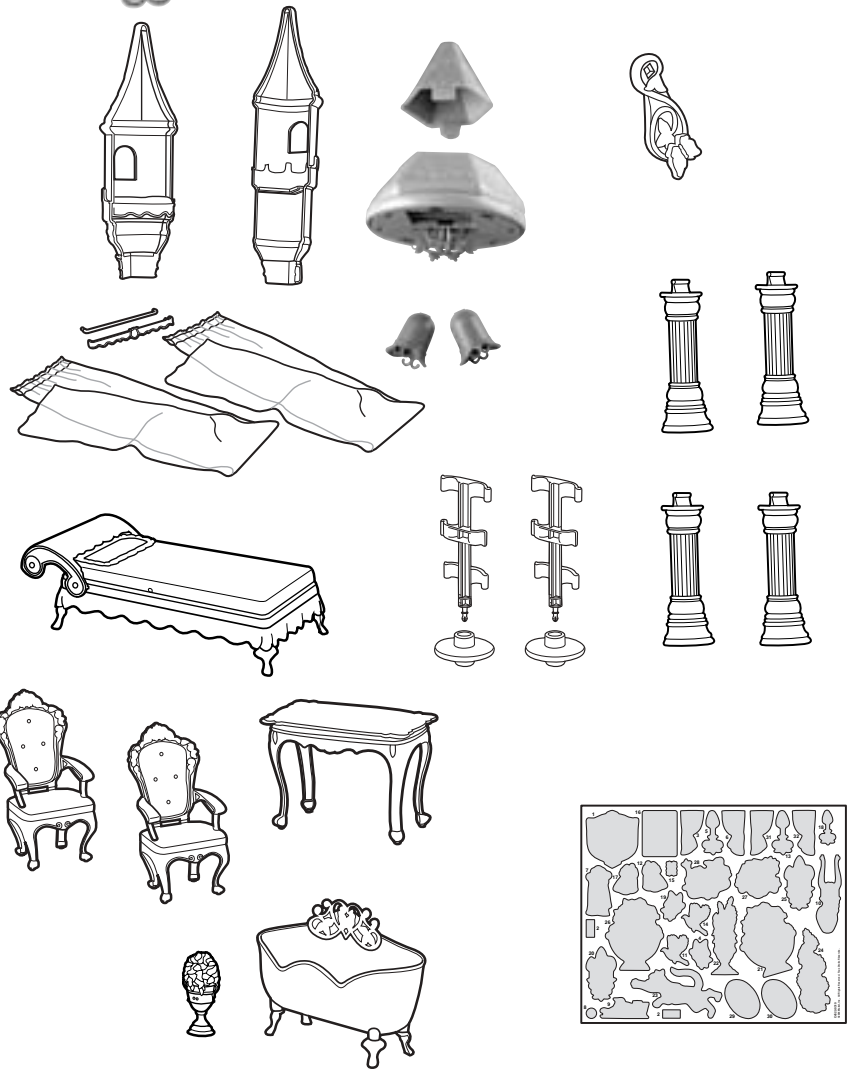

Dolls cannot stand alone.

INSTRUCTIONS

ADULT ASSEMBLY REQUIRED. Colours and decorations may vary from those shown.

Requires 3 AAA alkaline batteries, not included. Dispose of batteries safely.

CONTENTS: Please remove everything from the package and compare to the contents shown here. Keep these instructions for future reference as they contain important information.

 
 
 
3+



Anneliesa™ & Erika™ Dolls

Remove 'Try Me' Wire

The 'TRY ME' wire is connected to the back of doll during in-package demonstration only. Please undo the vinyl strap and pull the doll away from the package. The 'TRY ME' wire will disconnect. If it does not disconnect, remove the wire by hand.

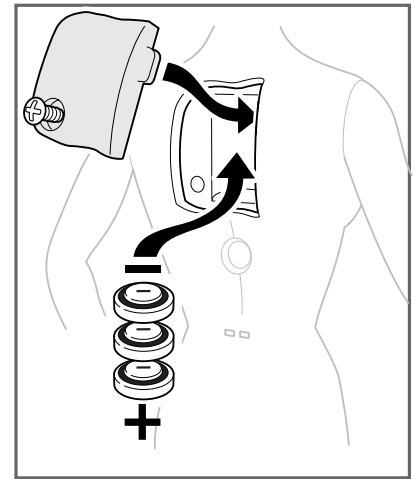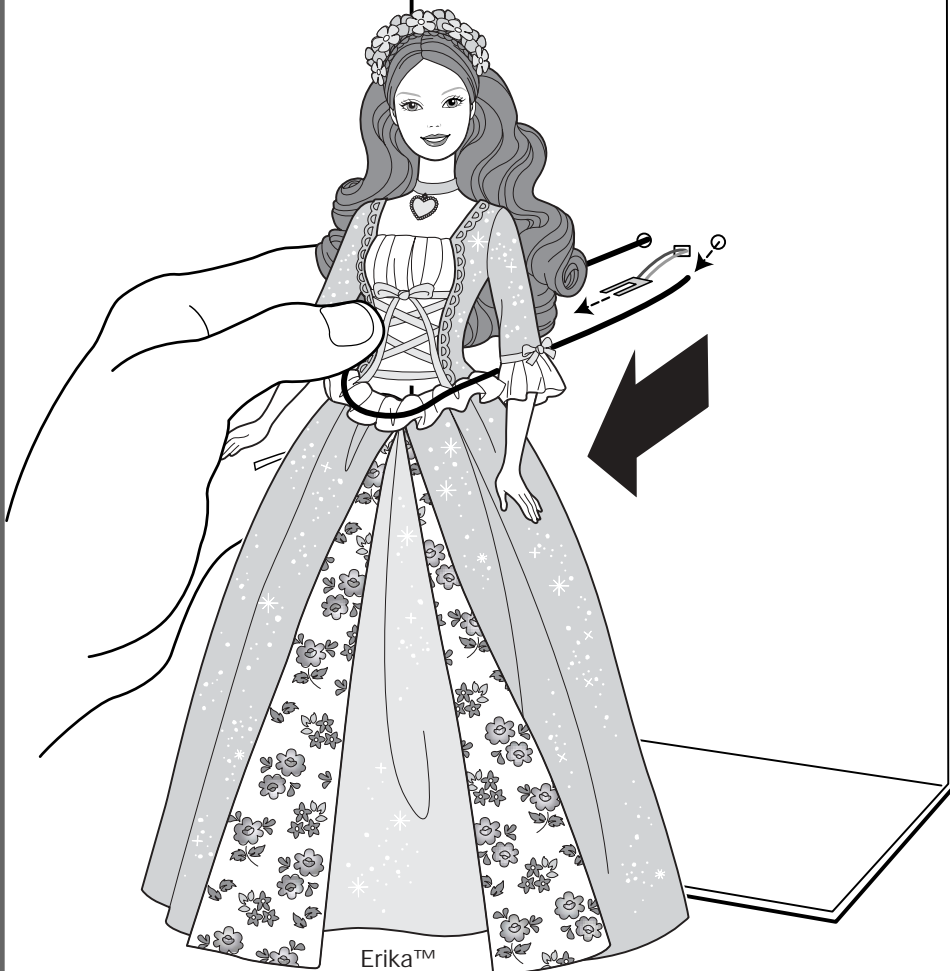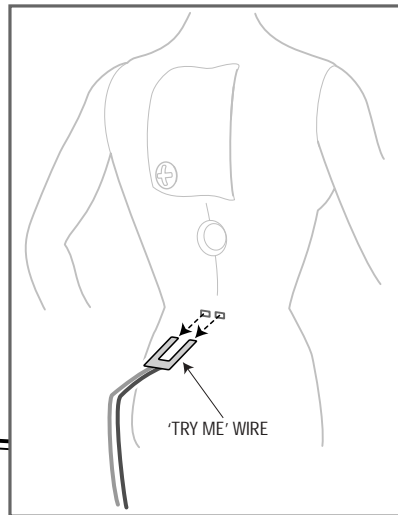

Replace Batteries

Replace batteries when sounds become distorted. To replace batteries, use a Phillips screwdriver (not included) to unscrew battery door. Insert three AG13 or LR44 button cell batteries (not included). Replace battery cover.

 
Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy (product). Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy (product) before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Playing With One Doll


Press sound button once, and doll "sings" one of two songs. Wait until her song is completed to press sound button again. She will "sing" you another song!

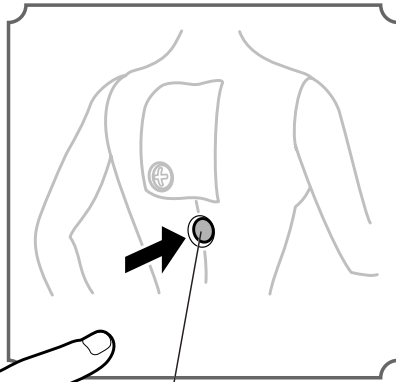

SOUND BUTTON

Playing With Two Dolls

 Press sound button on each doll until the shorter song for Princess Anneliese™ and Erika™ doll is finished. Now, press each doll's sound buttons at the same time and hear their beautiful duet!

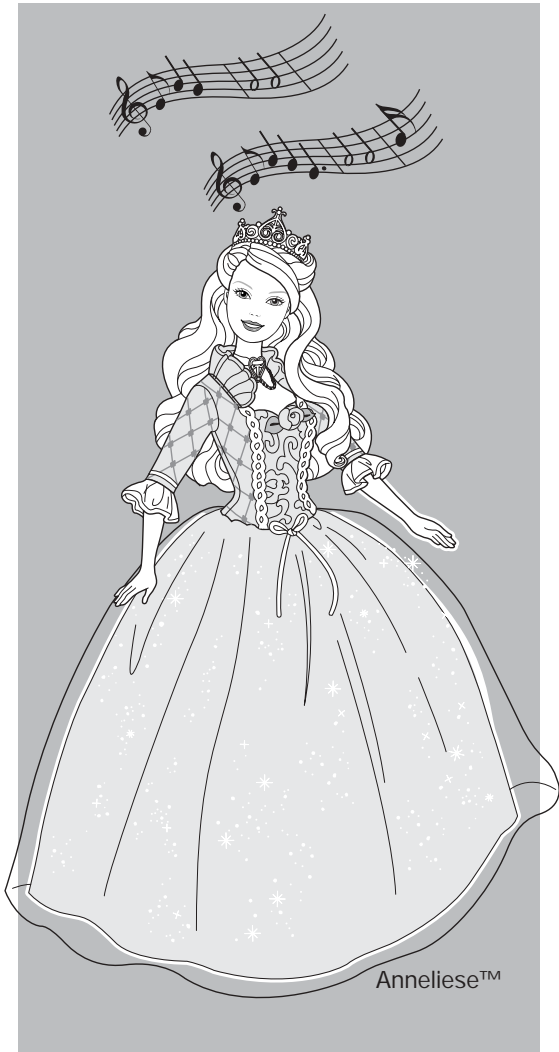

Anneliese™



Anneliese™

Erika™

Castle Assembly

 
 
Install Batteries

Unscrew battery door screw with Phillips screwdriver (not included), and remove door. Insert 3 AAA alkaline batteries, not included. For longer life, use only alkaline batteries. Replace door. Tighten screw. Replace batteries if sounds become garbled. Dispose of batteries safely.




Battery Safety Information







Batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:




- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy (product). Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy (product) before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

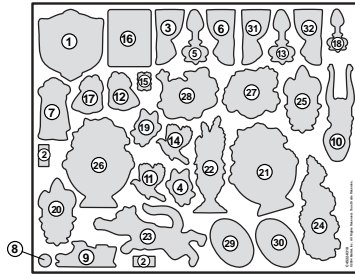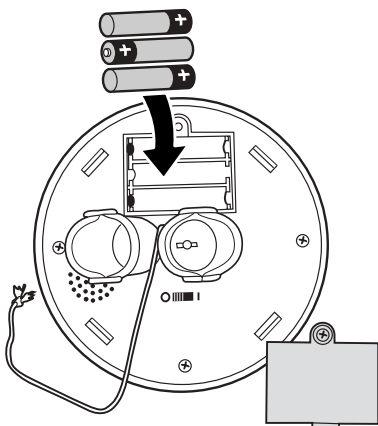

Attach labels by number as shown.

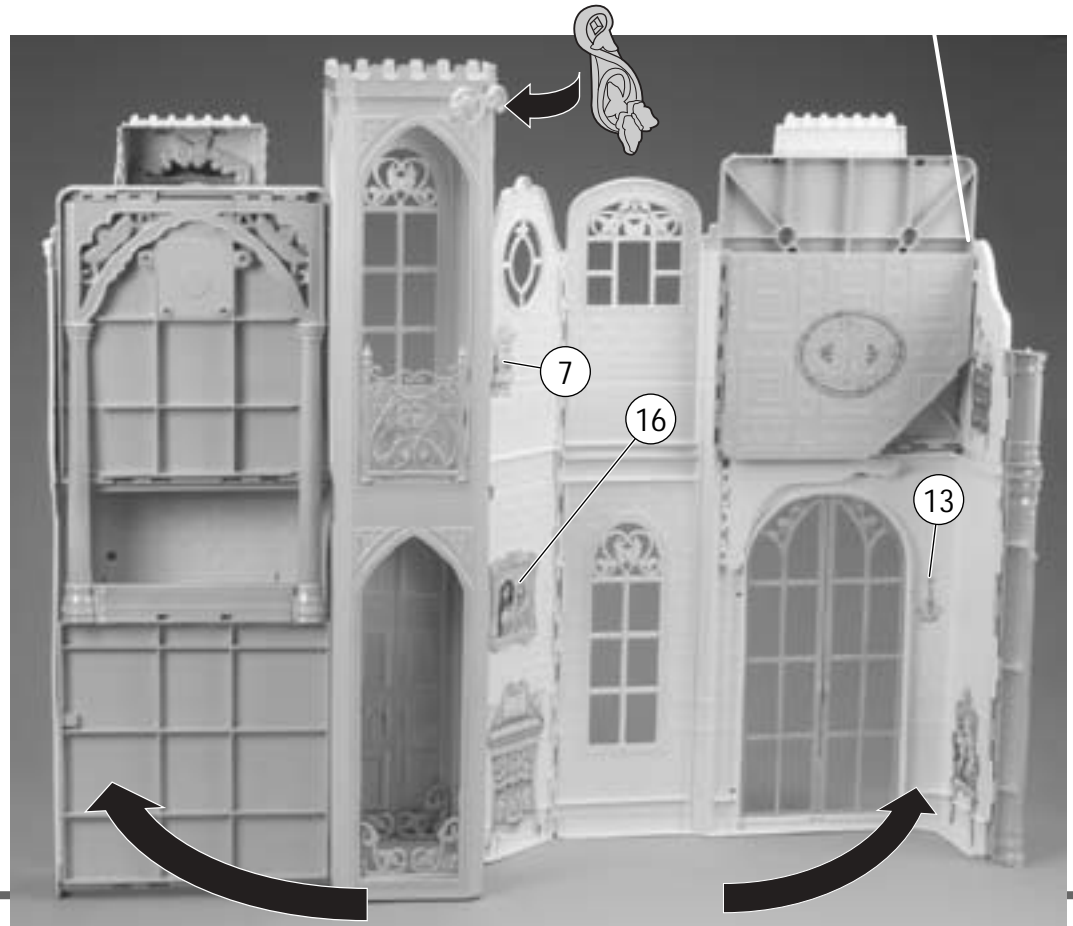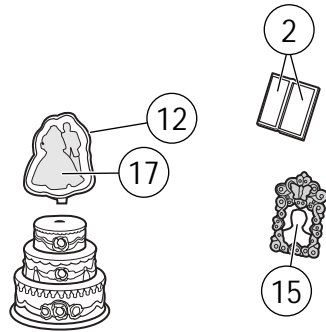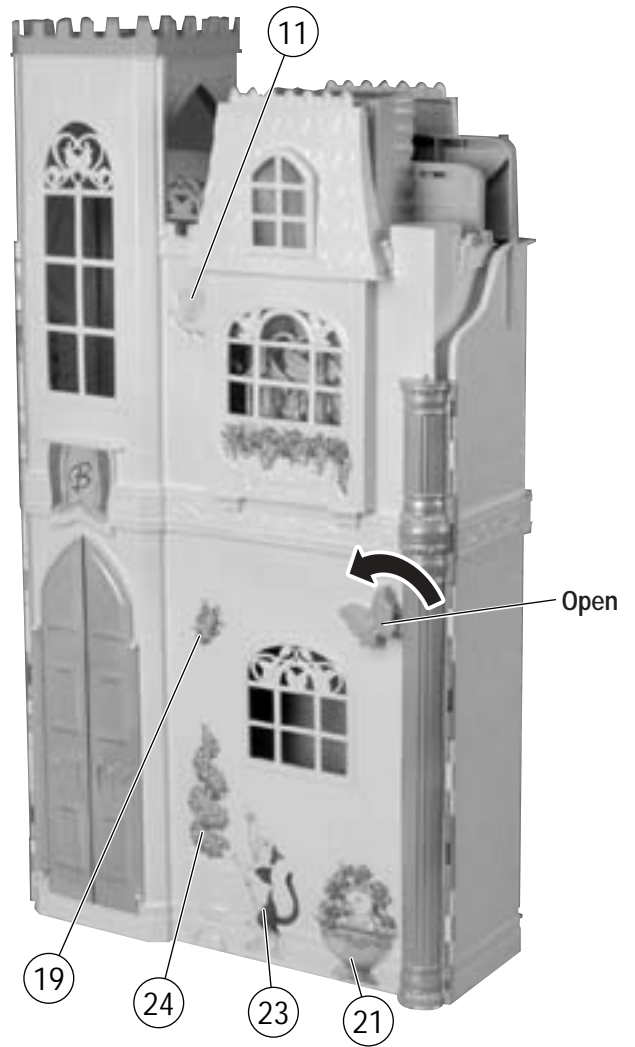   

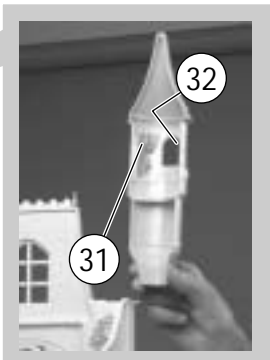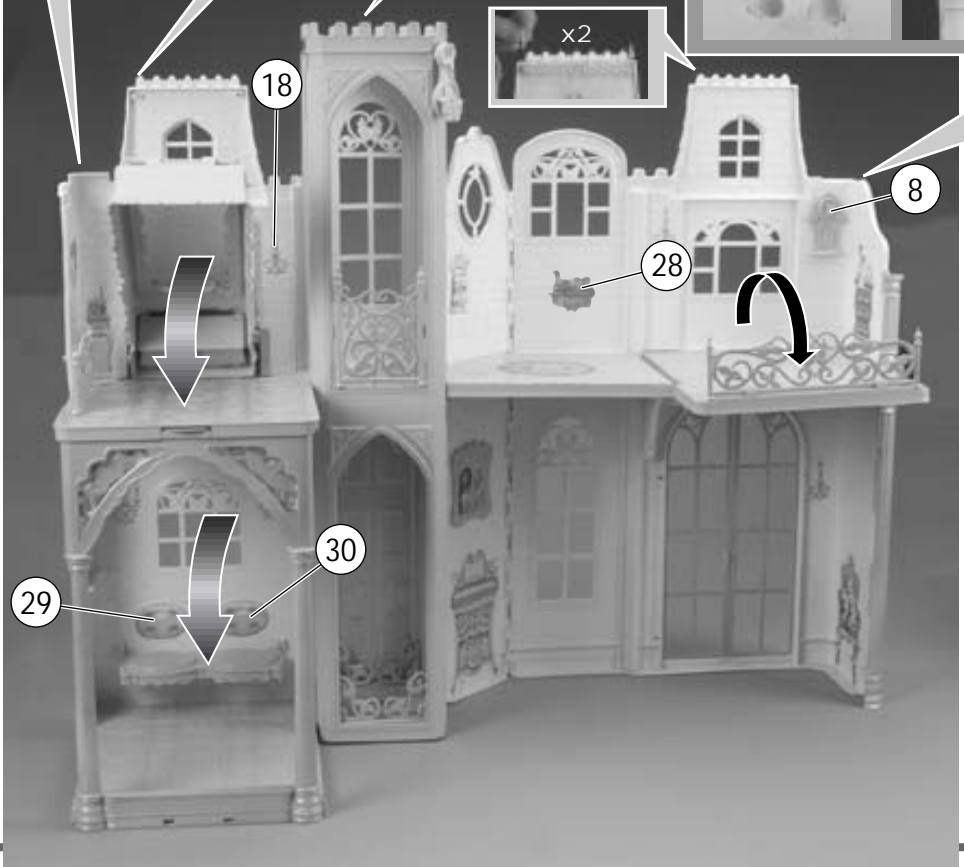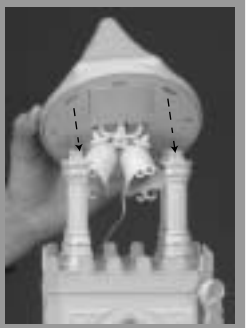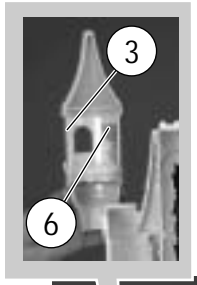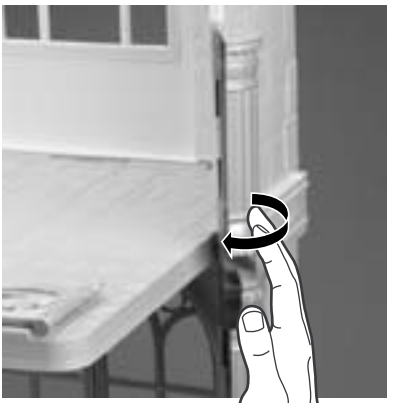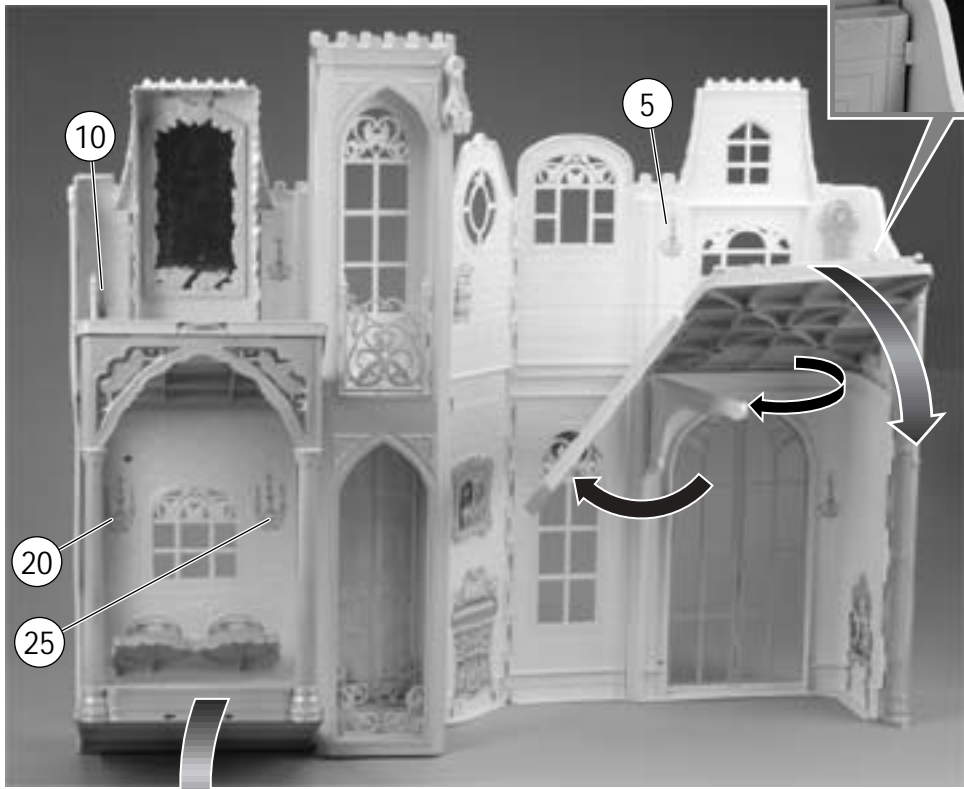      

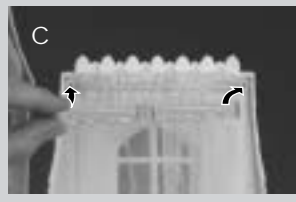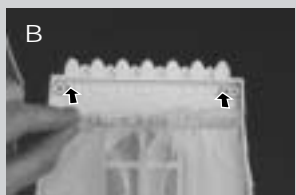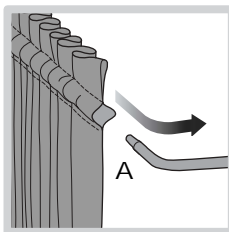   





27

9

CANOPY BED!



    Play Time!

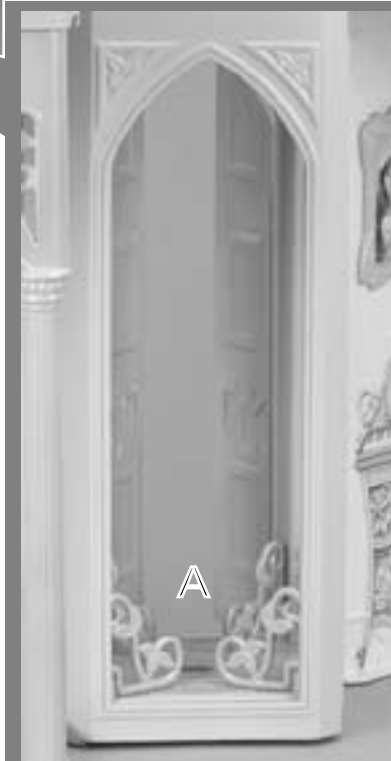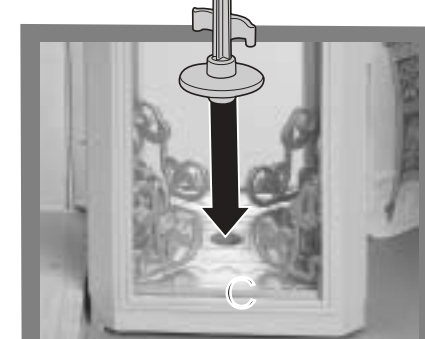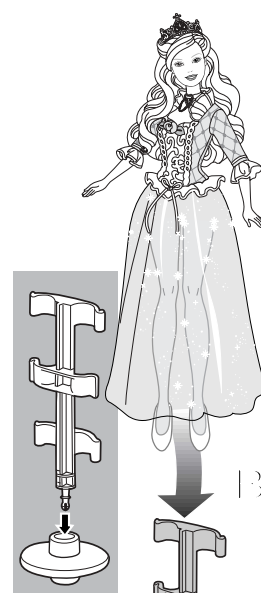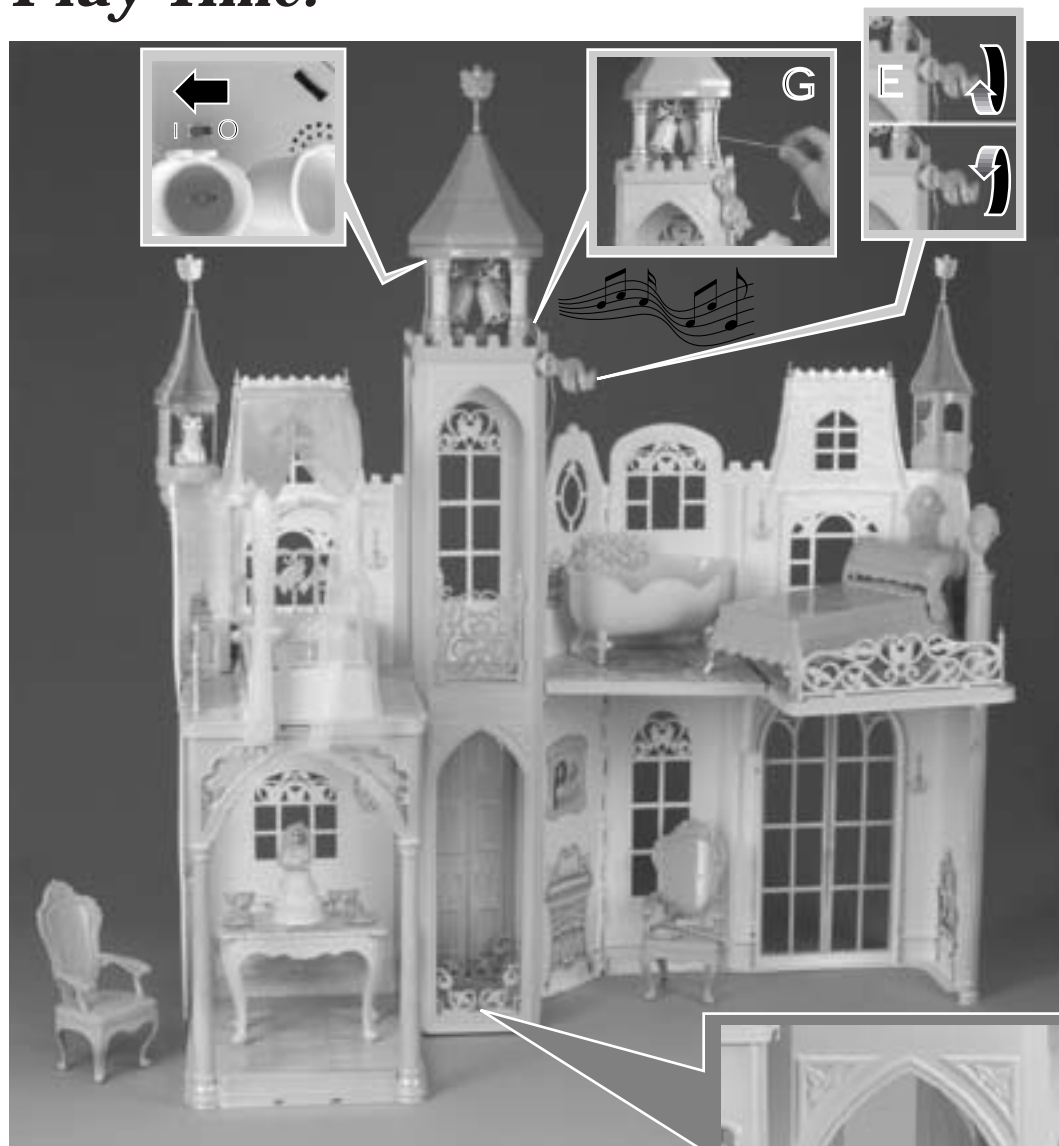


ELEVATOR:

- A.** Open doors.
- B.** Attach doll to doll stand.
- C.** Place doll in elevator.
- D.** Close doors, and secure doll's skirt **INSIDE OF DOORS** for unobstructed movement of elevator.
- E.** Turn handle to raise or lower elevator.


SOUND:

 - F.** Move switch to "ON" (I).
- G.** Pull cord. Wedding bells ring!


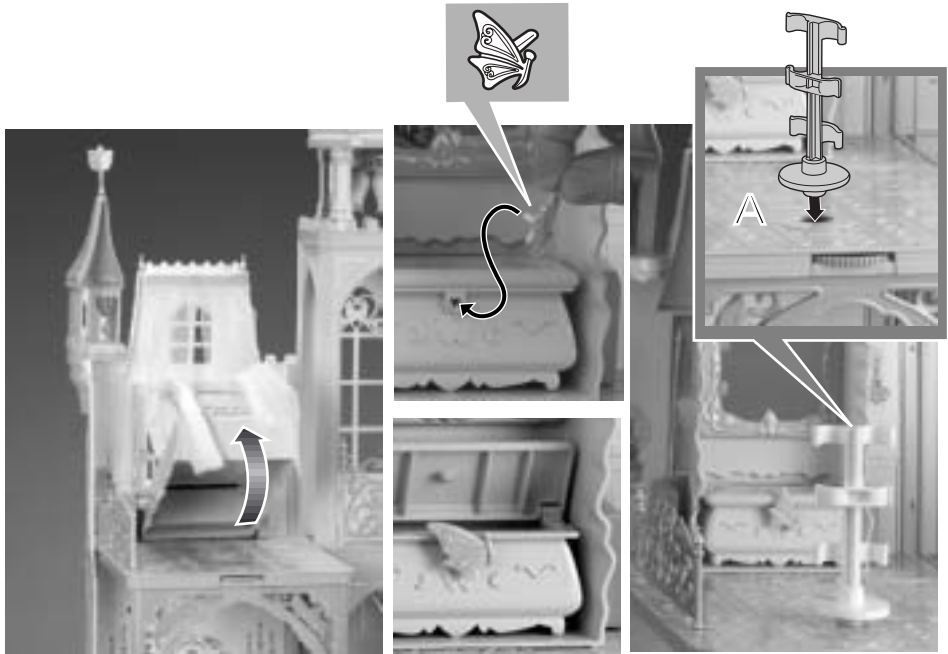


Twirling Platform:

 - A.** Attach doll stand to platform.
- B.** Attach doll.
- C.** Turn wheel to make the doll "twirl" in front of mirror.

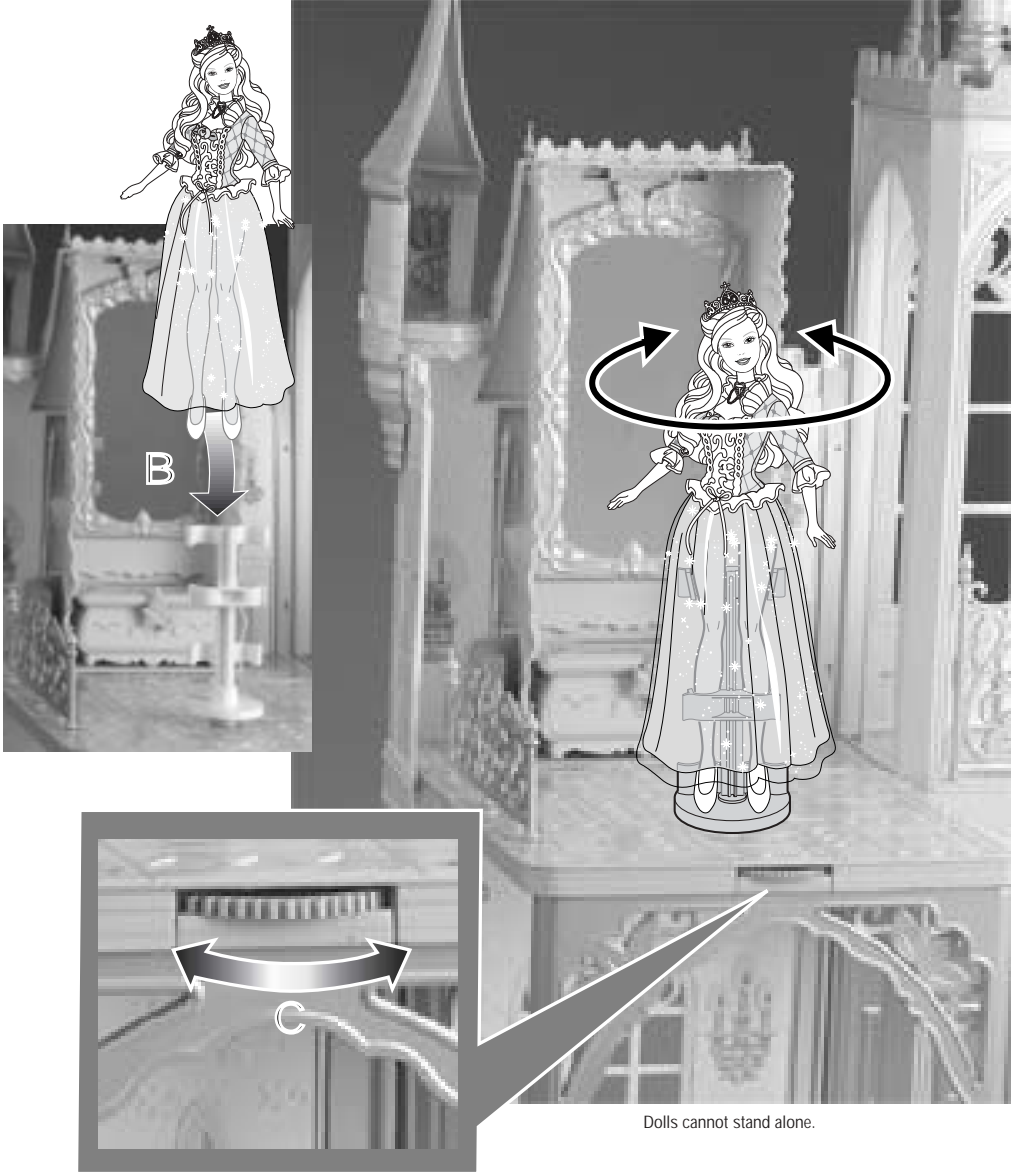








Dolls cannot stand alone.

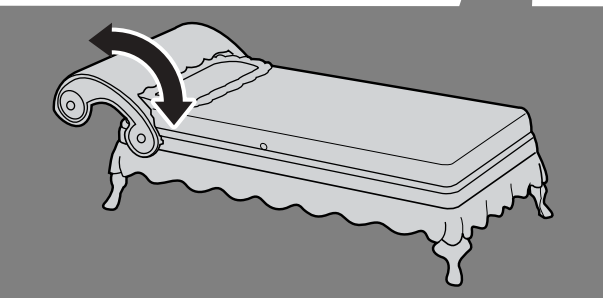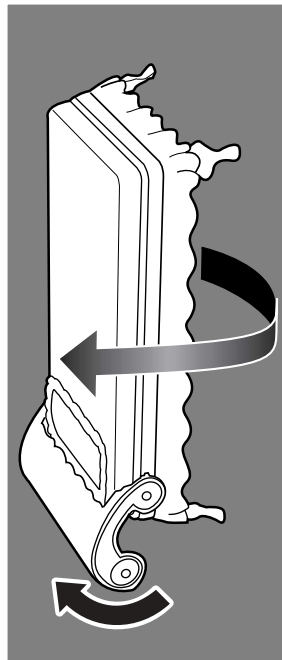  

BED CHANGES TO VANITY WITH MIRROR!



       Storage

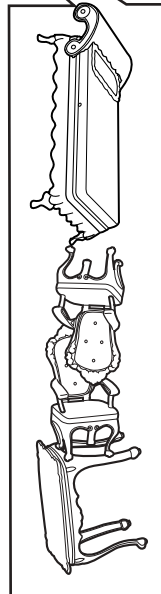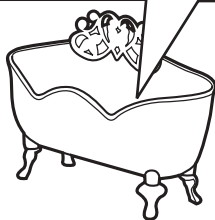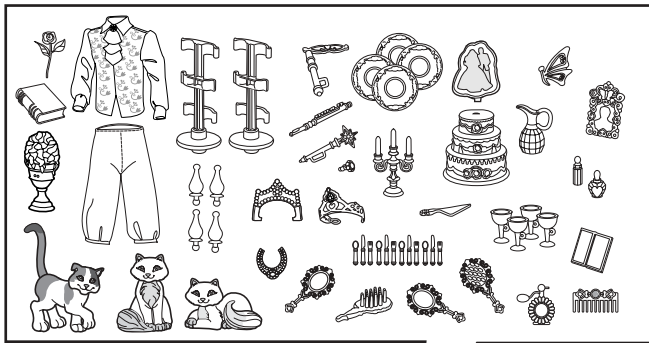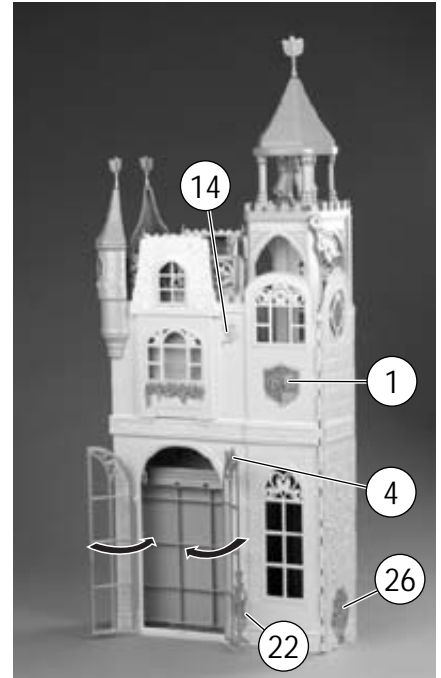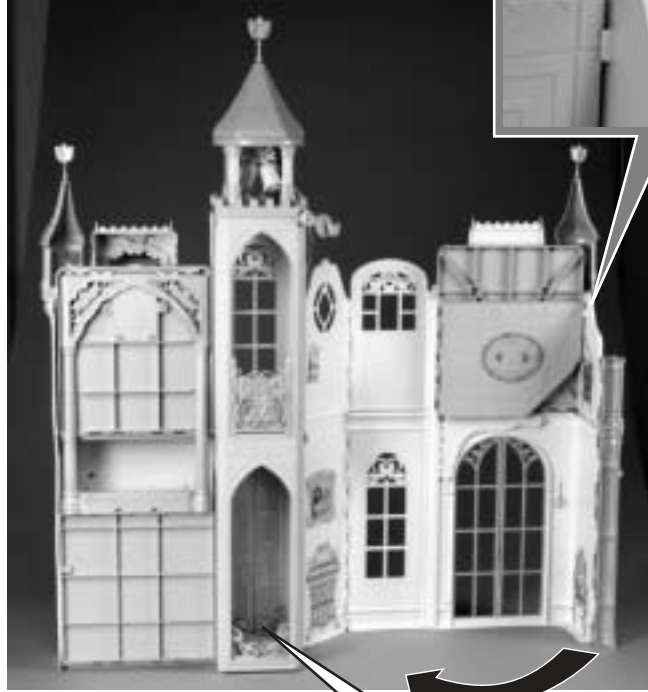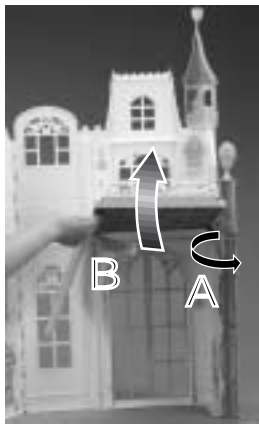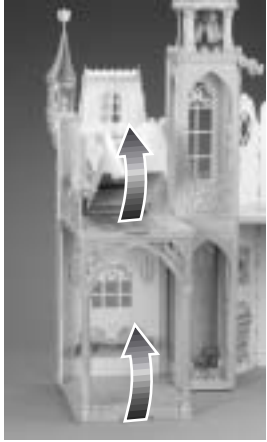

CONSUMER INFORMATION

YOU CAN TELL IT'S MATTEL!™ CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m. -6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

Consumer Relations, Mattel, Inc.
333 Continental Blvd.
El Segundo, CA 90245 USA

1(800) 524-TOYS

WE ARE DEDICATED TO QUALITY

Retain this address for future reference:

Mattel, U.K., Ltd., Vanwall Business Park, Maidenhead SL6 4UB.

Mattel Australia Pty., Ltd., Richmond, Victoria 3121. Consumer Advisory Service 1800 800 812 (valid only in Australia).

Mattel East Asia Limited, Rm. 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Mattel Canada Inc., Mississauga, Ontario L5R 3W2.