



Doorbell

Barbie™



Model 74001

1 User / Ages 4 and up

INSTRUCTION MANUAL


P/N 82380800 Rev.A

Hi! It's me, Barbie®! Now I can give cool messages to your friends and family when you are out. Doorbell has three awesome doorbell sounds that you can choose from. Barbie™ Doorbell also has an alarm; if someone tries to open the door while you are out, I will tell them "Nobody's home". Totally cool!

FEATURES

DOORBELL BUTTON - Press this button to ring the doorbell.

SECURE - Use this slide switch to turn the "secure mode" on or off.

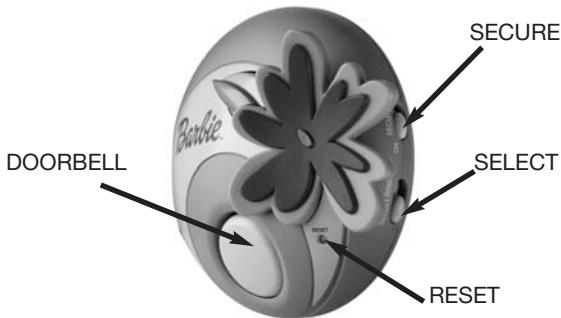

E

SELECT - Use this slide switch to select one of three doorbell sounds.

RESET - Use this button to reset the Doorbell. Insert a dull, pointed object (like the end of a paper clip) into the reset button hole.

NOTE CLIP - Insert a piece of paper to customize your room or leave a note.



SETTING UP THE DOORBELL

Remove the paper backing from the special tape, allowing the adhesive to be exposed, on the back of the doorbell. Next, firmly press the doorbell to the door.

DOORBELL SOUNDS - There are three doorbell sounds to choose from. To set the doorbell sound, move the SELECT slide switch to position 1, 2, or 3. You can listen to the doorbell sound by pressing the doorbell button.

SECURE MODE - This sets the alarm when you leave your room. Doorbell can be put into "secure mode" by moving the SECURE button to the "on" position. When the secure mode is on and someone tries to open the door, there will be a message from Barbie™. Slide the SECURE button to the "off" position to turn off the secure mode.

SLEEP MODE - Doorbell will go into sleep mode after 30 seconds of inactivity. Press the doorbell button to wake up the Doorbell.

BATTERY INSTALLATION

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

- Doorbell is powered by two (2) AAA (LR03) batteries.
- Using a screwdriver, loosen the screw until the battery compartment door can be removed.
- Insert two (2) AAA (LR03) batteries (we recommend alkaline) as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

CAUTION:

- As with all small batteries, the batteries used with this game should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the

- game and battery manufacturer's instructions.
- Do not dispose of batteries in fire.
- Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.

MAINTENANCE:

- Handle this product carefully.
- Store this product away from dusty or dirty areas.
- Keep this product away from moisture or extreme temperature.
- Do not disassemble this product. If a problem occurs, press the Reset button or remove and replace the batteries to reset the computer or try new batteries. If problems persist, consult your warranty information at the end of this manual for replacement instructions.
- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the game.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

Please retain this for future reference.

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

90-DAY LIMITED WARRANTY

(This product warranty is valid in the United States and Canada only)

Radica Games Limited warrants this product for a period of 90 days from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 90-day warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: **Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA.** Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

IMPORTANT: Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

RADICA:[®]
© 2003 RADICA GAMES LTD.
PRODUCT SHAPETM
ALL RIGHTS RESERVED



BARBIE is a trademark owned by and used under license from Mattel, Inc. © 2003 Mattel, Inc. All Rights Reserved.