



	4+
	1

Interactive Dance Mat

LET'S DANCE!

Come along with Barbie™ as Princess Genevieve™ and her beautiful sisters as they dance in 2 magical locations just like the movie! You'll twirl and swirl on the interactive dance mat performing ballet and ballroom dances with your favorite princesses. Perform your routine perfectly and get a big surprise from Twyla™ the kitty!

Please keep these instructions for future use as they contain important information.


NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Contents

- 1 Interactive Dance Mat with connection box and built-in A/V cable
- 1 Instruction Sheet


Insert Batteries

Open the battery compartment and insert 4AA batteries. Use a phillips head screwdriver (not included) to open the battery compartment and insert 4AA batteries. Requires 4AA batteries, not included. For longer life, use only alkaline batteries. Replace all batteries at the same time when buttons malfunction.

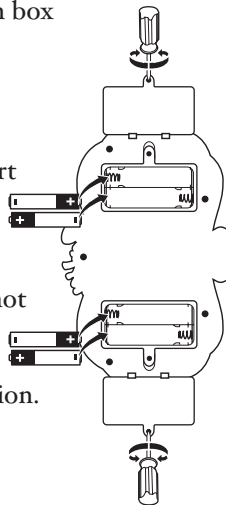

Connect to the TV

The AV cable attached to your connection box has one yellow and one white input. This cable needs to be plugged into your TV or VCR/DVD player. Plug the yellow input into the yellow outlined "Video In" hole on your TV or VCR/ DVD player. Plug the white input into the white outlined "Audio In" hole on your TV or VCR/DVD player.

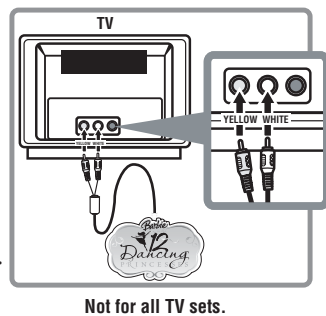

The video and audio inputs are usually in the front or the back of your TV, VCR or DVD. However, depending on the

type of TV or VCR/DVD you have, they could be in different places.

If you are plugging your game unit into your VCR or DVD player, your VCR or DVD player needs to be connected to the TV and turned on or your game unit will not work.


If you are going to connect your game unit directly to your TV and there is a cable box connected to your television, you will need to access the set up menu on your TV and change the source of the input just as if you were using a VCR or DVD player. You will probably need to use your television's original remote to access the menu. If you do not have the original remote, refer to your TV's owner's manual for instructions on how to do this without the remote control.

If you have an older TV set that does not have audio or video inputs you will need to purchase an "RF Modulator". These can be purchased from most electronic stores.

Start/Quit

Use the ON/OFF (i/o) switch on the connection box to start or quit the game.

Interactive Dance Mat Controls

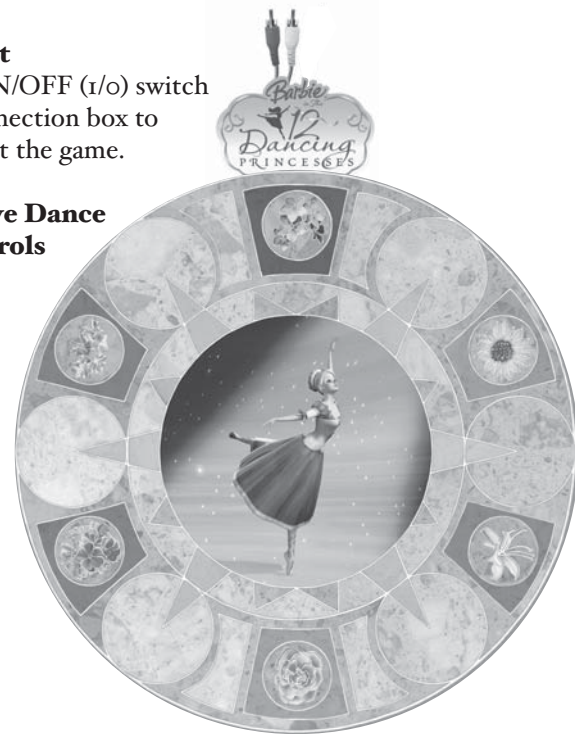

Princess Flowers – Use to make and confirm selections. When each princess' flower lights up during a dance routine, step on that flower to perform her dance move.

Center Circle - Resting area. Stand here between dance moves.

GETTING STARTED

Would you like to dance, your Highness? From the Main Menu, step on the indicated flower and go to the How To Play section.



HOW TO PLAY

This is where you'll find out everything you need to know to dance with Barbie™ as Princesses Genevieve™ and her beautiful sisters. When you're done learning, you can go back to the Main Menu and select Practice or Performance.

If you want to practice or perform right away, just skip How To Play and select one of the other choices from the Main Menu.

PRACTICE

Here is the place to learn the special dance moves of each princess. Once you've entered the Practice section, use the interactive dance mat to select a dance style and song to play in the background.

Step on the flower that represents each princess to see her perform her dance move. Follow along and soon you'll be dancing like a princess, too!



PERFORMANCE

Come here when you're ready to put together all the dance moves you've learned into a magical dance routine.

Step on Performance and you'll be taken straight to your first dance style and song.

As the song plays, the flower representing each princess will light up on your TV signaling you that she is about to dance.

Step on the flower as soon as you can after it lights up. If you are on the right place on the mat, the princess will do her beautiful dance move! Perform the dance move in time with the princess and then step back to the Center Flower to get ready for another princess' flower to light up on-screen.

When the next flower lights up, step onto it and perform that princess' dance move. Continue to follow along until the song is done. A screen will pop up after the song is over and tell you what a great job you did.

Remember, every song has a different dance routine. So don't forget to pay attention and always be on your toes!

QUICK DANCE

Can't wait to start dancing? Step on Quick Dance and go instantly to a random dance style and song.

Battery Safety Information

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).

Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).

Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

Do not mix old and new batteries.

Only batteries of the same or equivalent type as recommended are to be used.

Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed from the product.

The supply terminals are not to be short-circuited.

Dispose of battery(ies) safely.

Do not dispose of this product in a fire.

The batteries may explode or leak.



Protect the environment by not disposing of this product with household waste (2002/96/EC).

Check your local authority for recycling advice and facilities.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Mattel Inc.

Consumer Relations

636 Girard Ave

East Aurora, NY

(800) 524-8697

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

© 2006 Mattel, Inc. All Rights Reserved. Importado y distribuido por Mattel de México, S.A. de C.V., Insurgentes Sur. # 3579, Torre 3, Oficina 601, Col. Tlalpan, Delegación Tlalpan, C.P. 14020, México, D.F. MME-920701-NB3. 59-05-51-00. Ext. 5206 ó - 01-800-463 59-89. Mattel Chile, S.A., Avenida Américo Vespucio 501-B, Quilicura, Santiago. Mattel de Venezuela, C.A. RIF J301596439, Ave. Mara, C.C. Macaracuay Plaza, Torre B, Piso 8, Colinas de la California, Caracas 1071. Mattel Argentina S.A., Curupayti 1186, (1607) -Villa Adelina, Buenos Aires. Mattel Colombia, S.A., calle 123#7-07 P.5, Bogotá.

Need Assistance? In the US and Canada, service.mattel.com
or 1-800-524-8697, M-F 8AM - 6PM, ET.

¿Necesita ayuda? En los EE.UU. y Canadá, service.mattel.com
o bien 1-800-524-8697, L-V 8 a.m. - 6 p.m., huso horario del Este.
En México: 01 800 463 59 89 ó en DF y área metropolitana 59-05-51-00 Ext. 5206

SERVICE.MATTEL.COM

K2767



K2767-0821