

*Barbie*<sup>®</sup>

**VIDEO  
GIRL**

TM

**Doll**

Please remove everything from the package and compare to the contents shown on page 2.  
If any items are missing, please call 1-888-892-6123.  
Keep these instructions for future reference as they contain important information.



R4093-0920  
T8157  
R4807



6+

## BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.










**DOLL SHOULD NOT BE IMMERSSED IN WATER.**

## Table of Contents

<b>Quick start .....</b>	<b>2</b>
<b>Contents .....</b>	<b>2</b>
<b>Battery installation.....</b>	<b>3</b>
<b>System requirements.....</b>	<b>3</b>
<b>Power on/off .....</b>	<b>4</b>
<b>Record clips .....</b>	<b>4</b>
<b>Play back clips .....</b>	<b>4</b>
<b>Delete clips .....</b>	<b>5</b>
<b>Transfer clips to your computer.....</b>	<b>5</b>
<b>Video Girl™ Editing Software.....</b>	<b>7</b>
<b>Computer Mode .....</b>	<b>7</b>
<b>Troubleshooting .....</b>	<b>8</b>
<b>Technical specifications.....</b>	<b>inside back</b>

## QUICK START

1. Use a Phillips head screwdriver to install 2 AAA batteries -- one in each upper leg compartment.
2. Press  to turn power on.
3. Press  to record a video clip.
4. Press  again to stop recording.
5. Press  to play the clip you just recorded.  
*Note: Video Girl™ records audio but can only play it back on your computer. The doll does not play back sound.*
6. Press  to pause play.
7. Press  twice to delete clip.
8. Press and hold  to turn power off.

## CONTENTS

 
- Barbie® doll with video camera inside
- USB cable
- Instruction Manual




Doll cannot stand alone.

## GETTING STARTED

Front View

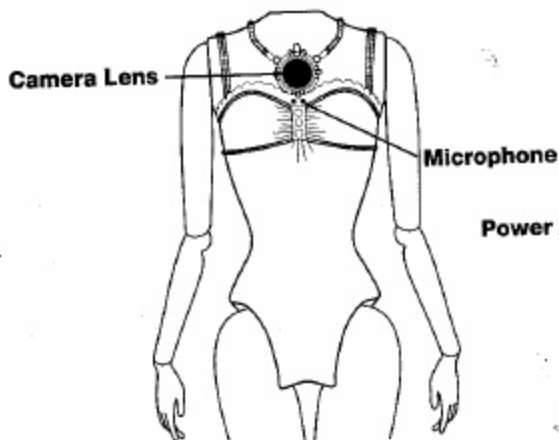


Back View

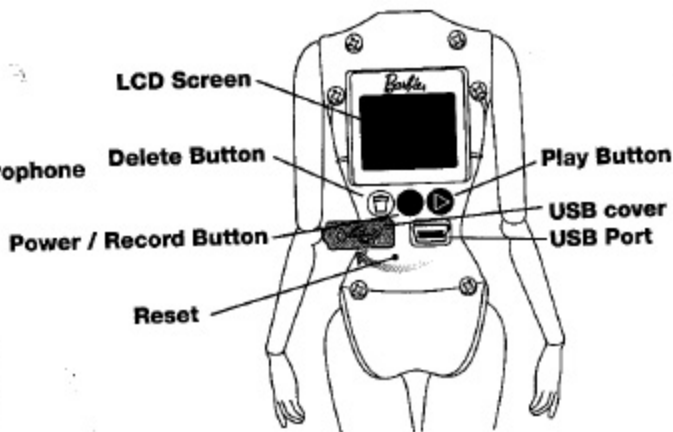 

## BATTERY INSTALLATION

Use a Phillips head screwdriver to open the battery doors located in the upper legs.

 Put 1 AAA battery (not included) in each compartment.  
Battery life is approximately 75 minutes.

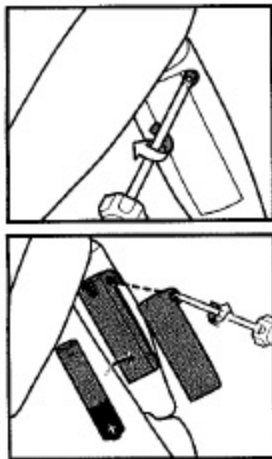

A flashing battery status will appear on the LCD screen on the back of the doll when approximately 2 minutes of power remains.

Alkaline batteries are recommended for longest life.



## SYSTEM REQUIREMENTS

Doll is Windows/MAC compatible.  
Downloadable Video Girl™ Editing Software is Windows compatible only.

### Minimum System Requirements

PC: Windows XP with SP3 / Vista with SP2  
Mac: OS 10.5 Leopard

Pentium III 800 MHz or equivalent  
512 MB of RAM  
800 MB free hard drive space  
Screen resolution 1024x768  
Direct X 9.0  
USB 2.0

### Recommended System Requirements

PC: Windows XP with SP3 & .NET framework 3.5 / Vista with SP2 / Windows 7  
Mac: OS 10.6 Snow Leopard

Intel Core 1.8 GHz or equivalent  
1 GB of RAM or above  
1 GB free hard drive space  
Screen resolution 1024x768  
Direct X 9.0 or above  
Internet Explorer 6.0 or above  
Internet Connection  
USB 2.0

 
## POWER ON/OFF


To turn **Power On**, press . Video Girl™ will display battery and memory status.

### Battery Status



### Memory Status

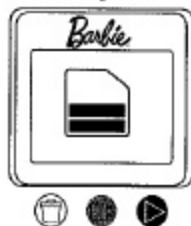

To turn **Power Off**, press and hold .

If you don't press any buttons for 5 minutes, Video Girl™ will turn off automatically. She will not turn off if you are recording or playing back a clip. The battery status will flash approximately 2 minutes before power is depleted. When power is used up, Video Girl™ will turn off automatically.

## RECORD CLIPS

To **RECORD**, press . To **STOP** recording, press  again.


The counter shows the length of your video clip.




If the doll's memory is full, the Memory Status will appear. You must delete or transfer clips from the doll to clear memory.



## PLAY BACK CLIPS

To **PLAY** the clip you just recorded, press .



To **PAUSE**, press  again.

To **SKIP** to previous clips, press and hold . Release when you get to the clip you want to see.




*NOTE: Video Girl™ records audio, but can only play it back on your computer.  
The doll does not play back sound.*

## DELETE CLIPS

To **DELETE** the clip you just recorded:

1. Press .
2. When the trash bin appears on screen, press  again to confirm.

To **DELETE** a different clip:

1. Press and hold  until the clip you want to delete begins to play.
2. Press .
3. When the trash bin appears on screen, press  again to confirm.




Confirm Deletion



Deleted



 
To **DELETE** all clips:

1. Press .
2. Press and hold  and  at the same time until Deleted screen appears.
3. All clips will be deleted. If you have many clips, it may take some time to delete them all.

To **CANCEL** deletion, press  or .

## TRANSFER CLIPS TO YOUR COMPUTER

1. Remove the cover from the USB port.
2. Connect doll to your computer with the USB cable.

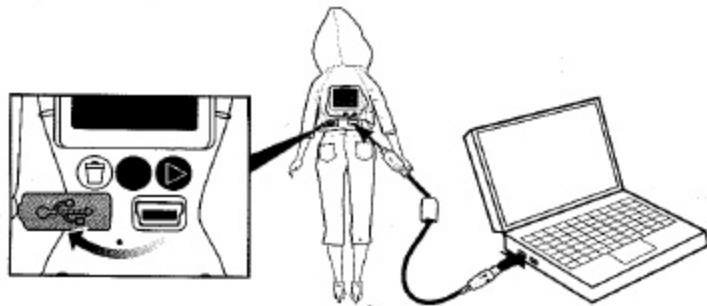

3. The Camera Screen will appear. Wait 5 seconds approximately until the USB Screen appears. (DO NOT PRESS ANY BUTTONS DURING THIS TIME.)

#### Camera Screen

Wait 5 seconds until USB Icon appears



#### USB Screen

 


### FOR WINDOWS


- 4.
- If you have installed the FREE Video Girl™ Editing Software (available for download at [www.barbie.com/videogirl](http://www.barbie.com/videogirl)), it will launch automatically when doll is connected. Your clips will automatically transfer from your doll to your computer.  
**Note that clips are deleted from your Video Girl™ after they are transferred.**
  - If you have not installed the Video Girl™ Editing Software: Open Windows Explorer, navigate to the Video Girl™ drive, and select the clips from the "DCIM/100DSCIM" folder. Move or copy clips to your hard drive.  
*Note: It is recommended you MOVE clips rather than COPY in order to free up space to record more video on the doll.*

5. Safely remove Video Girl™ from your computer.

- Remove USB cable by clicking on "Safely Remove Hardware" in the system tray.



 - Select Video Girl™ and wait for "Safe to Remove Hardware" message.



- Disconnect USB cable.

### FOR MAC

- Open the Video Girl™ drive on your desktop. Clips are in the "DCIM/100DSCIM" folder.
  - Move or copy clips to your desktop.
  - To Eject, drag the Video Girl™ drive to the Trash.
6. Disconnect USB cable.



## VIDEO GIRL<sup>™</sup> EDITING SOFTWARE

Download FREE Video Girl<sup>™</sup> Editing Software for Windows only from [www.barbie.com/video girl](http://www.barbie.com/video girl)



This exclusive software lets you edit and create your own movies. You can also add music, sound effects, graphics and transitions to your Video Girl<sup>™</sup> movies.

## COMPUTER MODE

Computer Mode lets you stream live video from your Video Girl<sup>™</sup> to your computer. Computer Mode is only available through the Video Girl<sup>™</sup> Editing Software.

1. Connect doll to your computer with the USB cable.
2. Press ● when you see the Camera Screen.

**NOTE:** You must press ● within 5 seconds or Video Girl<sup>™</sup> will transfer clips to your computer. (see page 5)

### Camera Screen



3. Click Video Girl<sup>™</sup> icon on desktop.
4. Live video will be displayed on your computer screen. The doll's buttons and screen are not functional in this mode. The doll's batteries are also not used in this mode.
5. When finished, disconnect the USB cable.
6. Replace the cover over the USB port.

# TROUBLESHOOTING

PROBLEM	SOLUTION
Doll stops responding to button presses.	Press reset switch with a paperclip.
Doll does not respond after replacing batteries.	Press reset switch with a paperclip.
There is no sound during playback on doll.	Video Girl™ records audio but can only play it back on your computer. The doll does not play back sound.
Audio playback on computer is muffled or scratchy.	Make sure the microphone on the doll is not blocked by the doll's clothing or your finger.
Clips do not transfer to computer automatically.	Automatic transfer is only supported if you have installed the Video Girl™ software (for Windows only). If you have installed the software and clips still don't transfer automatically, unplug the USB cable, wait a few seconds, and reconnect. Do not press any buttons for 5 seconds.
USB device is not recognized.	Try a different USB port on your computer.
Video is too dark.	Position a light source behind the camera. Do not shoot into the light.

For questions about Video Girl™ call Technical Support at: 1-888-892-6123

## TECHNICAL SPECIFICATIONS

Memory capacity 256MB  
Battery life approximately 75 minutes  
Video resolution 320 x 240  
Video capacity approximately 25 minutes

LCD information  
0.95" CSTN with backlight  
65,000 colors  
Operating temperature -20°C to +70°C  
Storage temperature -30°C to +80°C

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.**

### **THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.**

Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

### **CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.**

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes :

(1) Il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

Mattel, Inc. 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations  
1-888-892-6123.

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-888-892-6123.

Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135  
312 Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City,  
Tsimshatsui, HK, China.

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien  
Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.

## CONSUMER INFORMATION

Need Assistance? Visit [service.mattel.com](http://service.mattel.com) or call 1-888-892-6123  
(US and Canada only).

[SERVICE.MATTEL.COM](http://SERVICE.MATTEL.COM)



Protect the environment by  
not disposing of this product  
with household waste  
(2002/96/EC). Check your  
local authority for recycling  
advice and facilities.

© 2010 Mattel, Inc. All Rights Reserved.

R4093, T8157, R4807